 




Kit 1170

LADA 110, 4-dr Sedan, 96-07


LADA 112, 5-dr Hatchback, 00-08

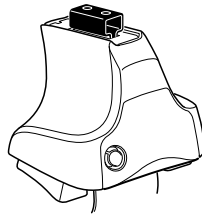

  754 Rapid System
480R Rapid Traverse (North America)

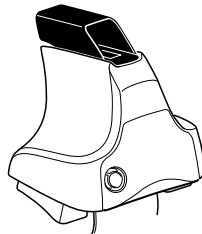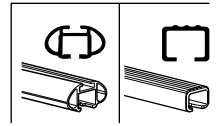


480 Traverse (North America)

 

754 Rapid System
480R Rapid Traverse (North America)

480 Traverse (North America)


 
1

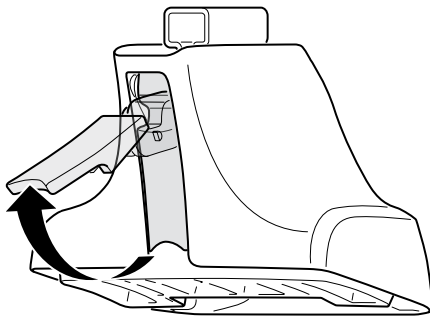




2




 
 
754 Rapid System
480R Rapid Traverse
(North America)

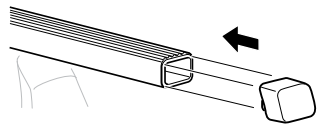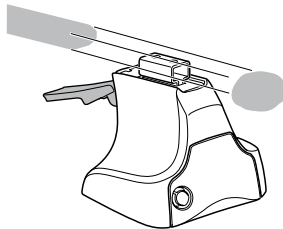

x4

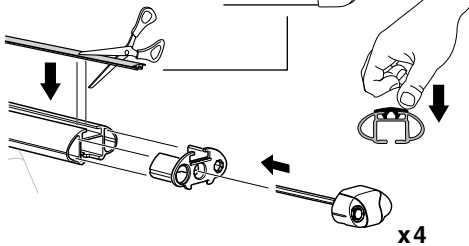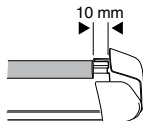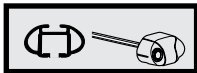   



x4

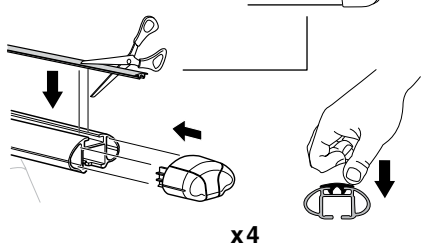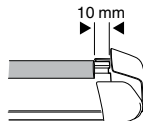   



x4



  
480 Traverse
(North America)

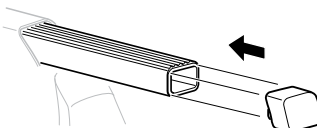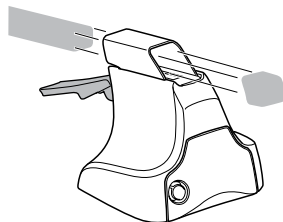


x4

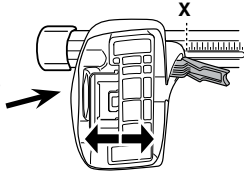  3**754** Rapid System


| | X |
|--|-------------|
| LADA 110, 4-dr Sedan, 96-07 | 22,5 |
| LADA 112, 5-dr Hatchback, 00-08 | 22,5 |

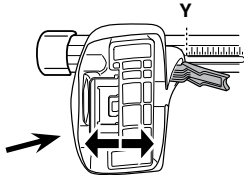 


| | Y |
|--|-----------|
| LADA 110, 4-dr Sedan, 96-07 | 20 |
| LADA 112, 5-dr Hatchback, 00-08 | 20 |

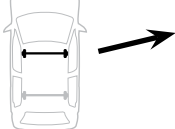 3**480R** Rapid Traverse**480** Traverse**(North America)**

| | X inch | X mm |
|--|----------------|---------------|
| LADA 110, 4-dr Sedan, 96-07 | 34 1/2" | 876 mm |
| LADA 112, 5-dr Hatchback, 00-08 | 34 1/2" | 876 mm |


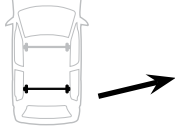 


| | Y inch | Y mm |
|--|----------------|---------------|
| LADA 110, 4-dr Sedan, 96-07 | 33 1/2" | 851 mm |
| LADA 112, 5-dr Hatchback, 00-08 | 33 1/2" | 851 mm |


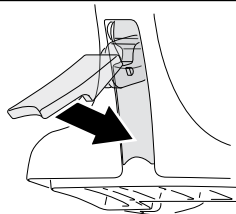 
4

5

  
LADA 110, 4-dr Sedan, 96-07
LADA 112, 5-dr Hatchback, 00-08

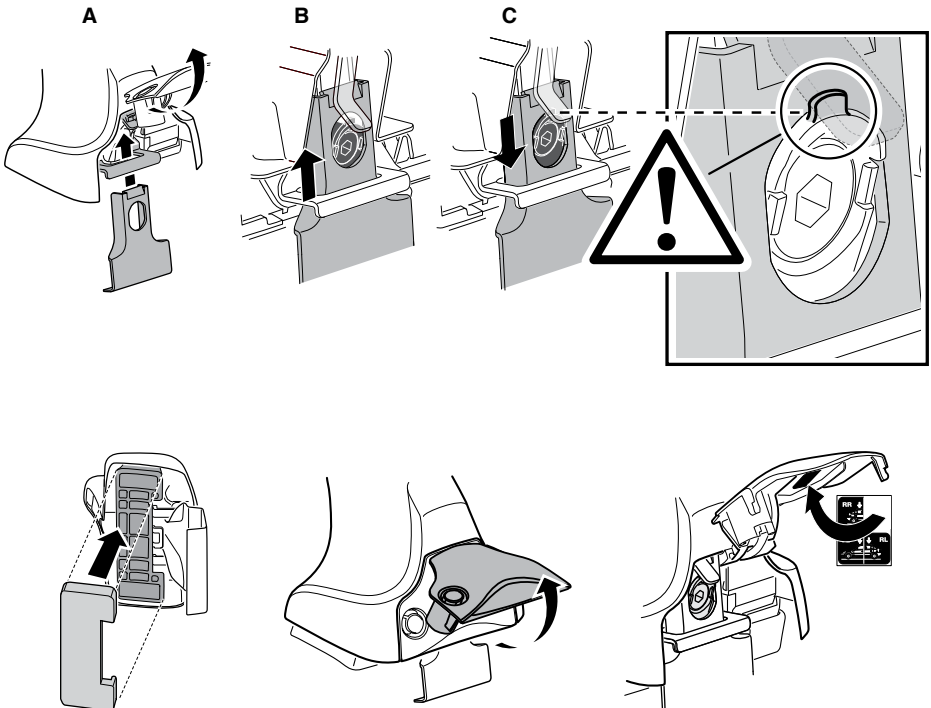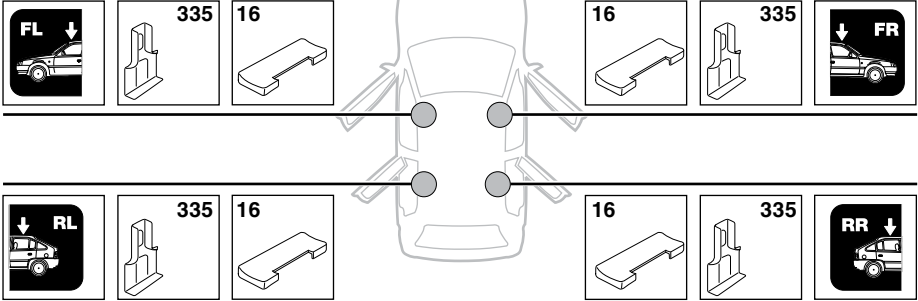


6

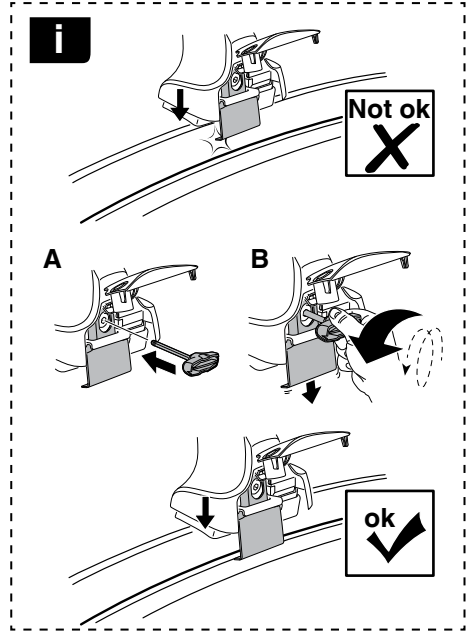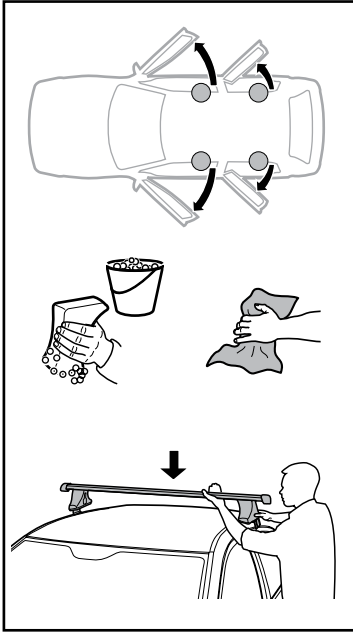  

| | X mm | Y mm | X inch | Y inch |
|---------------------------------|--------|--------|--------|---------|
| LADA 110, 4-dr Sedan, 96-07 | 220 mm | 700 mm | 8 5/8" | 27 1/2" |
| LADA 112, 5-dr Hatchback, 00-08 | 220 mm | 700 mm | 8 5/8" | 27 1/2" |

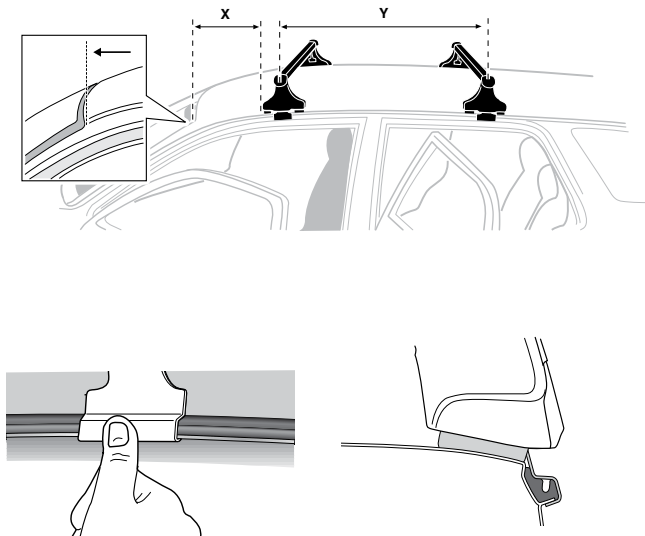 

7

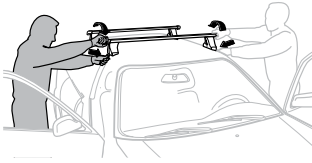 

GB/US Tighten alternately
 D Die Schrauben abwechselnd anziehen
 F Serrer alternativement chaque côté
 NL Afwisselend aan de linker- en de rechterkant aandraaien
 I Alternare il serraggio delle viti
 E Apertar alternativamente
 PT Aperte alternadamente
 S Dra åt växelvis
 FIN Kierrä vuorotellen
 EST Pinguldage vaheldumisi
 LAT Pieļieciet pamišus
 LIT Užsukinėkite pakaitomis
 PL Śruby dokręcaj naprzemiennie
 RU Затягивайте попеременно

 
CZ Pokręťta bagażnika dokręcaj dokręcaj naprzemiennie.
 SK Dofahajte striedavo
 SLO Privijajte izmenično.
 HR Naizmjerno zategnite
 HU Egymástól függetlenül szorítandó
 GR Σφιγίγες εναλλάξ
 TR Dönüşümlü sıkın

中文 交替拧紧


한국어 번갈아 가며 조이십시오.

日本語 交互に締め付けてください。



ไทย ชันในแบบสลับ


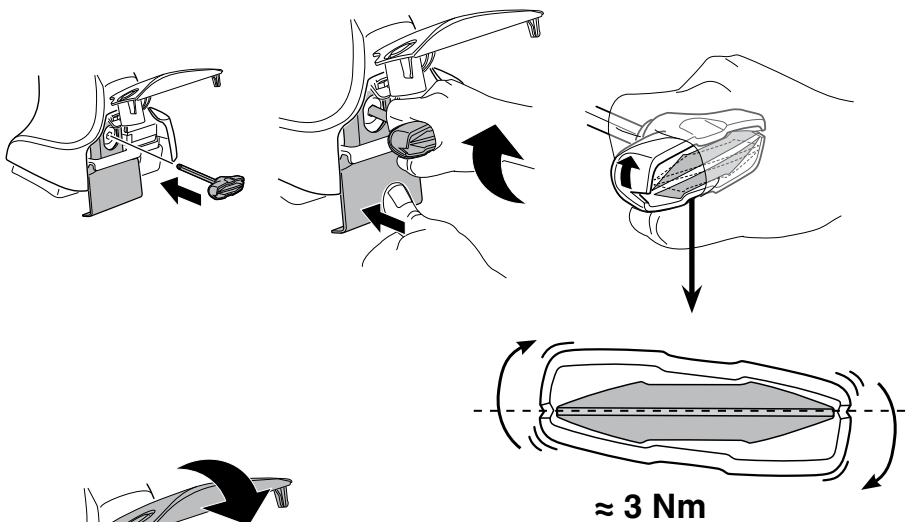


≈ 3 Nm

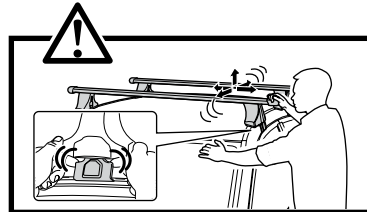 


8

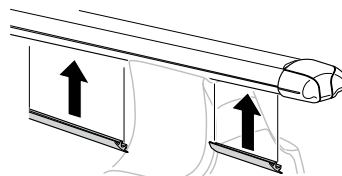  

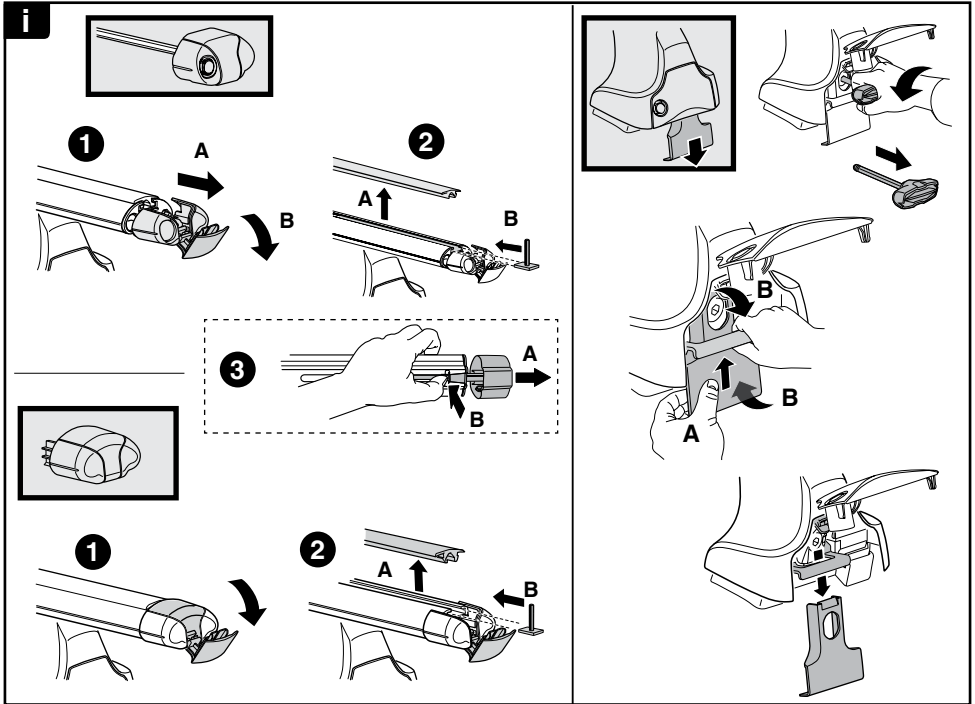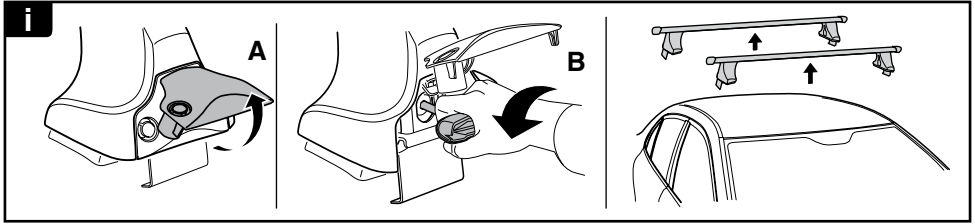  

THULE
SWEDEN
**ONE
KEY
SYSTEM**

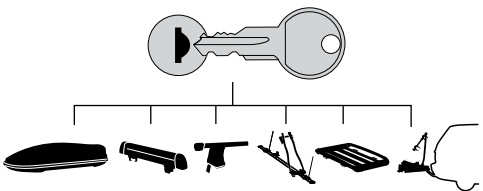 

| | | |
|------|-----|-------|
| | 544 | (x4) |
| | 596 | (x6) |
| | 588 | (x8) |
| | 510 | (x10) |
| | 452 | (x12) |
| NA | | |
| EUR | | |
| ASIA | | |

