 
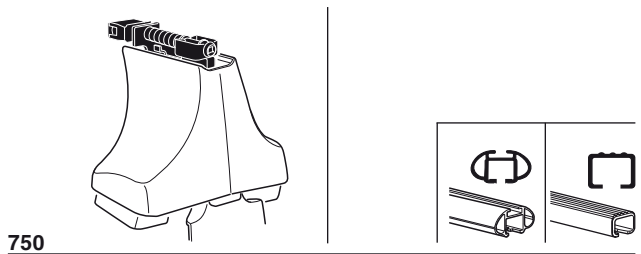 
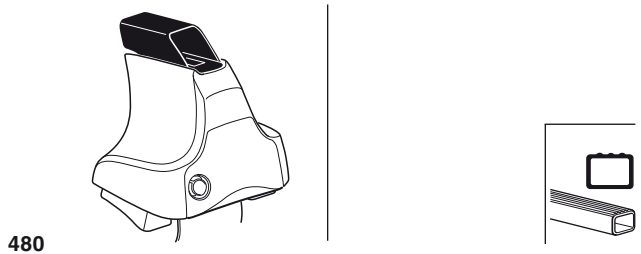 


Kit 1022

MAZDA 323 F, 5-dr Hatchback, 90-94

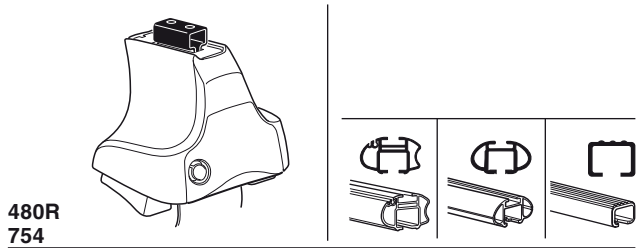

x2	x2	x2	x2	x2
x2		x2	x2	
x2		x4	x4	
x4				

 
 
Kit




3



754

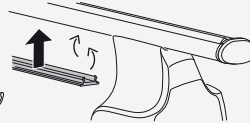


750

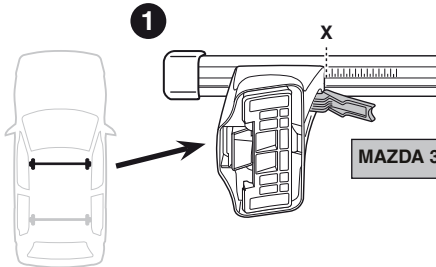 


1

 2




MAZDA 323 F, 5-dr Hatchback, 90-94

 X
26,5

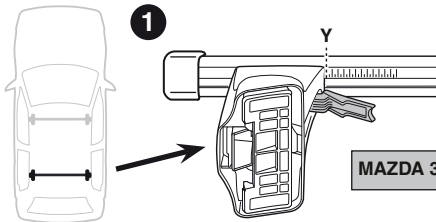

1

 2



MAZDA 323 F, 5-dr Hatchback, 90-94

Y
30

 


480R




480

1



2

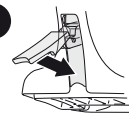 


MAZDA 323 F, 5-dr Hatchback, 90-94

X inch


X mm

36 1/8"

 
916 mm

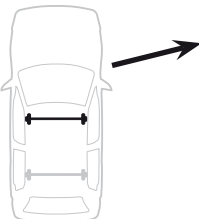

1

 

2

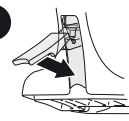 


MAZDA 323 F, 5-dr Hatchback, 90-94

Y inch

Y mm



37 1/2"

 951 mm

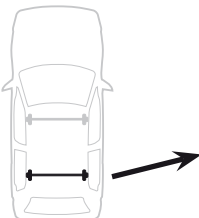

4

 
 
MAZDA 323 F, 5-dr Hatchback, 90-94

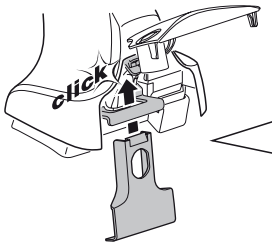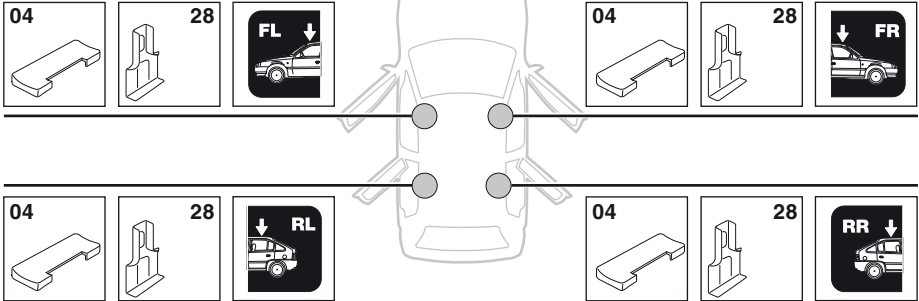

5



	X mm	Y mm	X inch	Y inch
MAZDA 323 F, 5-dr Hatchback, 90-94	190 mm	650 mm	7 1/2"	25 5/8"

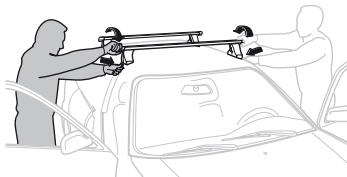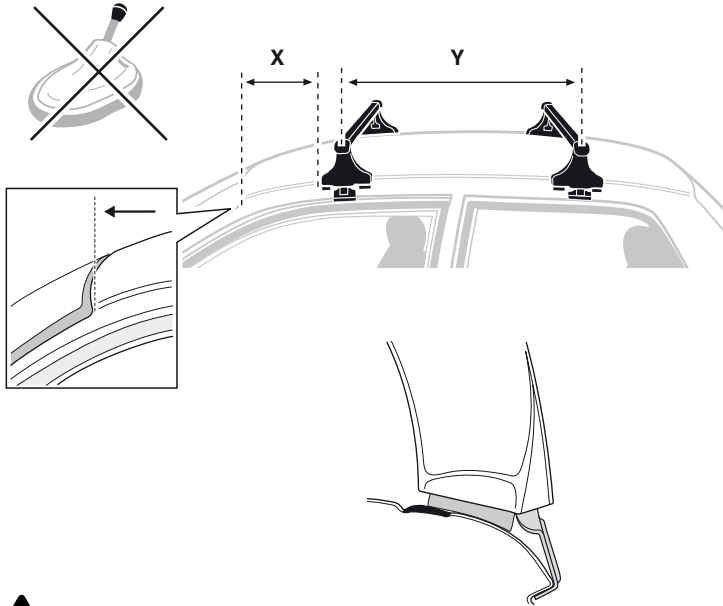  

GB/US Tighten alternately

D Die Schrauben abwechselnd anziehen

F Serrer alternativement chaque côté

NL Afwisselend aan de linker- en de rechterkant aandraaien

I Alternare il serraggio delle viti

E Apretar alternativamente

PT Aperte alternadamente

S Dra åt växelvis

FIN Kierrä vuorotellen

EST Pinguldage vaheldumisi

LAT Pielieciet pamišus

LIT Užsukinėkite pakaitomis

PL Śruby dokręcaj naprzemiennie

RU Затягивайте попеременно

CZ Pokręťta багаžníka dokręcaj dokręcaj naprzemiennie.

SK Doťahujte striedavo

SLO Privijajte izmenično.

HR Naizmjenično zategnite

HU Egymástól függetlenül szorítandó

GR Σφιγγετε εναλλάξ

 
 
 
 
 
 
 
 
 
TR Dönüşümlü sıkın

中文 交替拧紧

한국어 번갈아 가며 조이십시오.

日本語 交互に締め付けてください。

ไทย ชันโนแบบสลับ

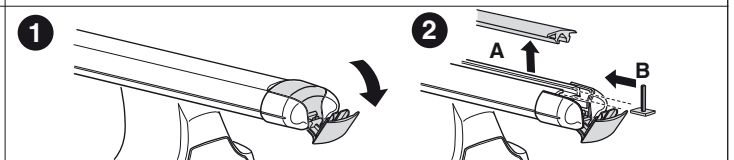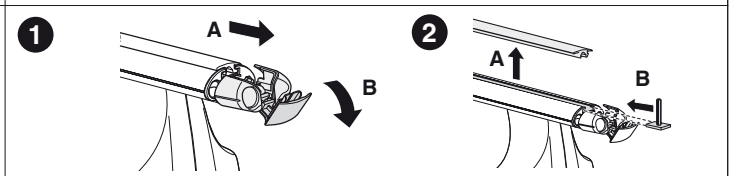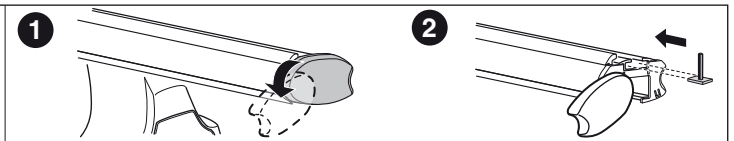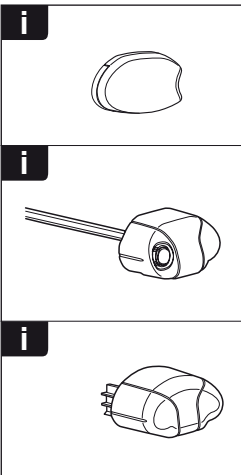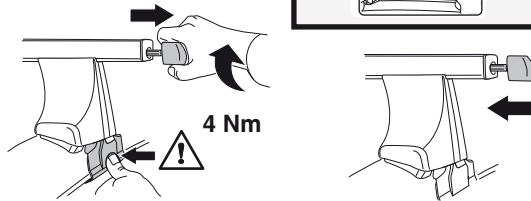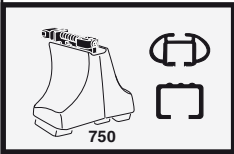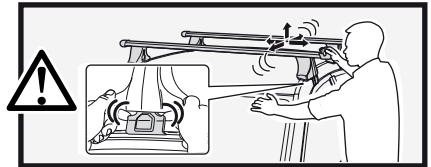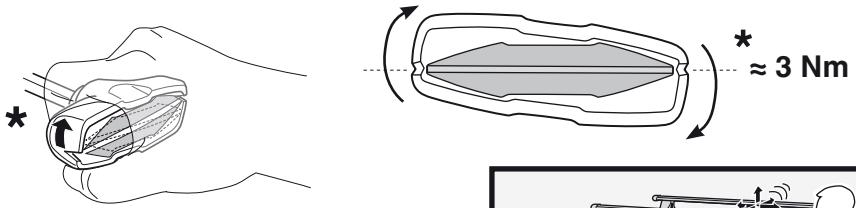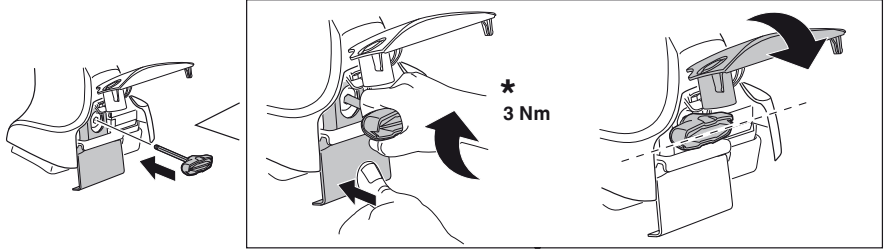6



THULE
SWEDEN
**ONE
KEY
SYSTEM**



		(x4)
		(x6)
		(x8)
NA		(x10)
EUR		(x12)
ASIA		(x12)

