
Fitting instructions

Make : Saab 900



HB; '93 -> / Coupé; '94 ->
/ 9-3; 1998->
..

Type: 2244


Permanently





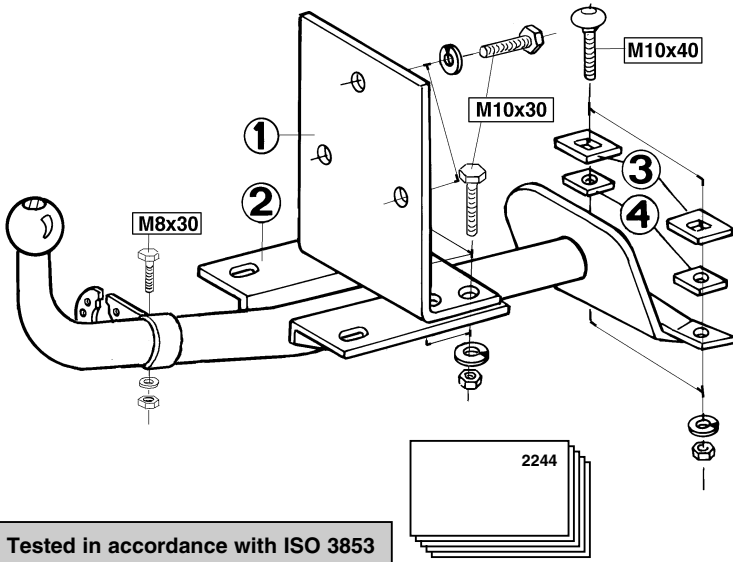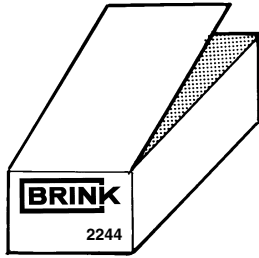

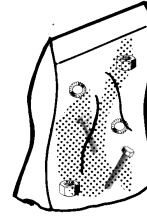


linked to

quality







Tested in accordance with ISO 3853





-  (1x) M8x30
-  (7x) M10x30
-  (2x) M10x40
-  (1x) M8 self-locking
-  (10x) M10
-  (1x) M8
-  (9x) M10
-  (2x) 40x6 L=40
-  (2x) 40x5 L=40

224470/16-08-2001/1

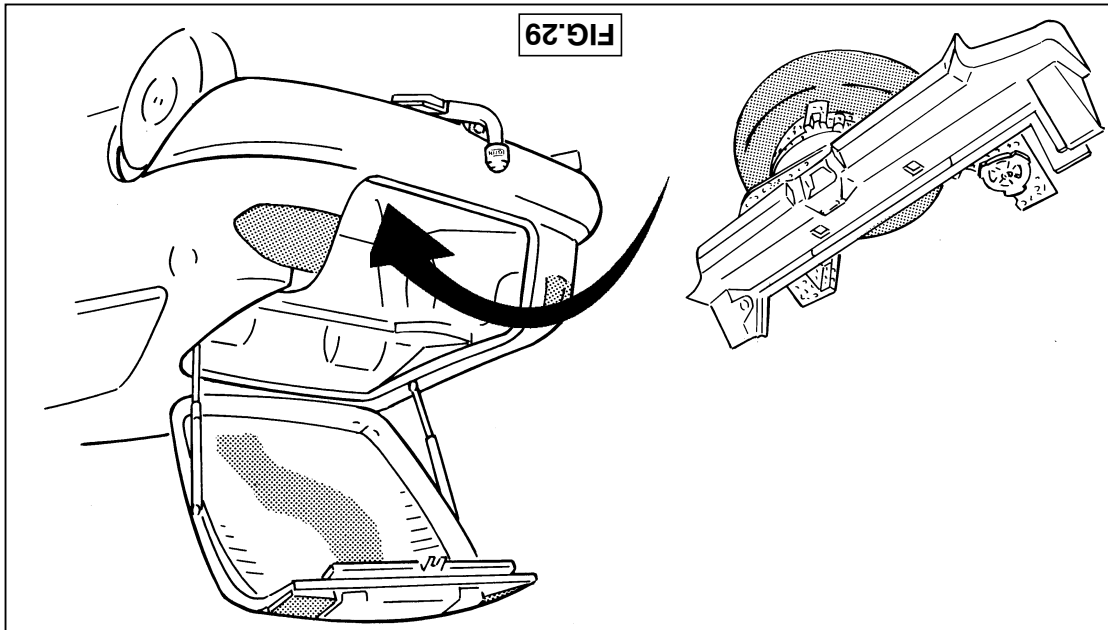
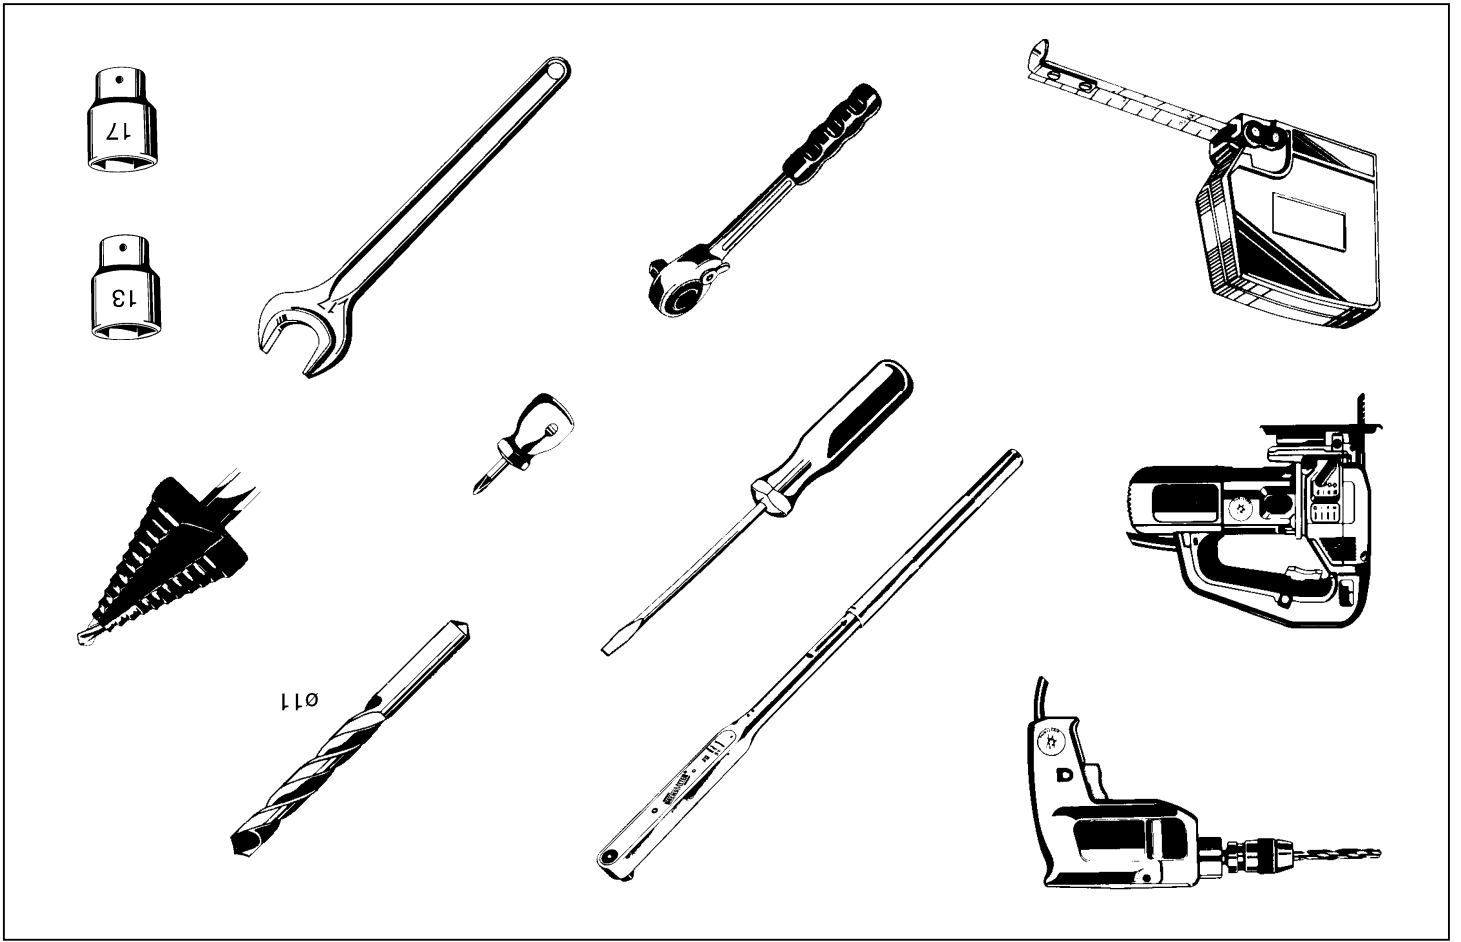


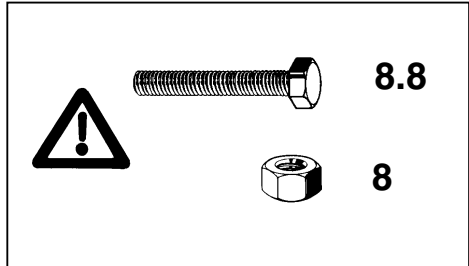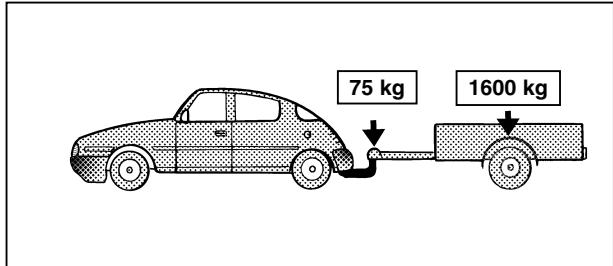








D=8,5 kN

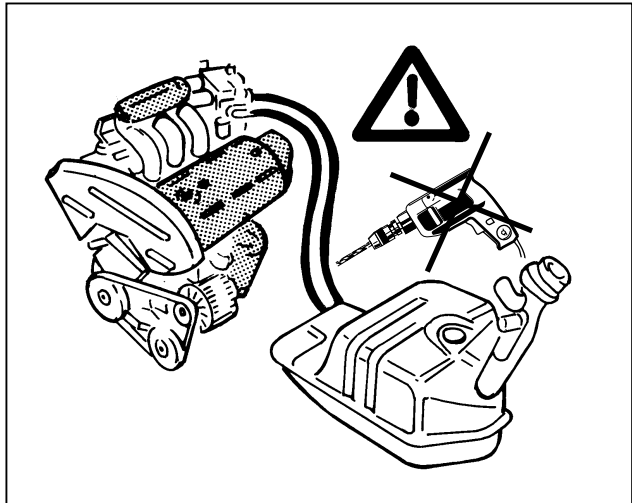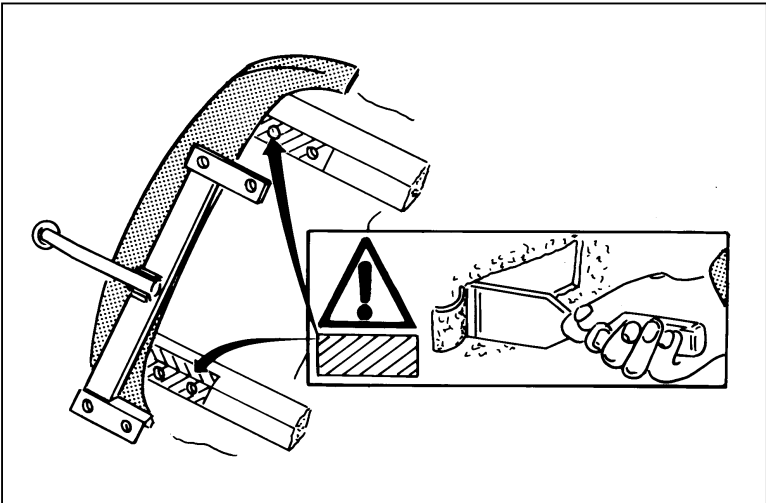


224470/16-08-2001/3


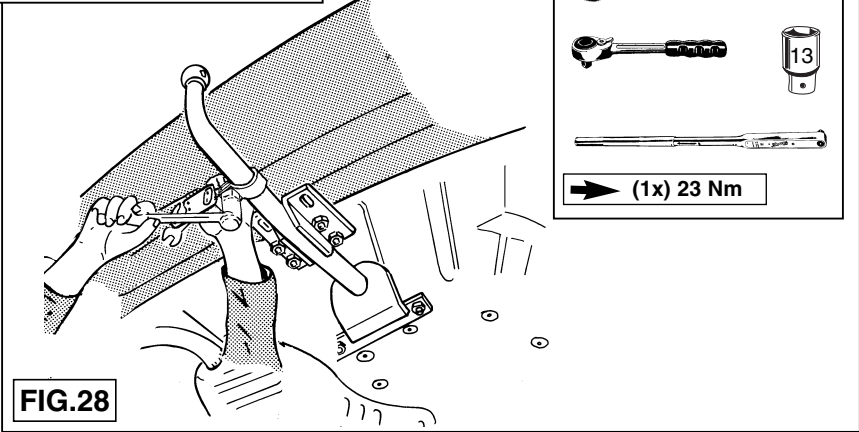
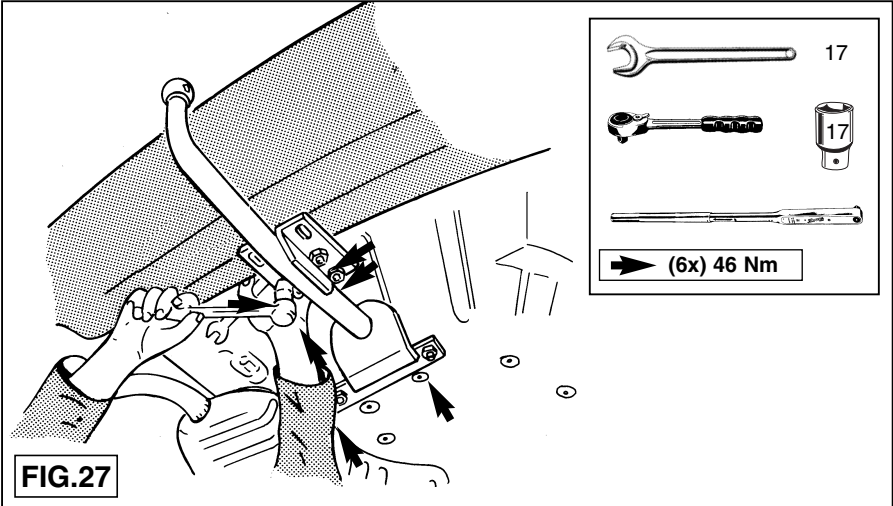


224470/16-08-2001/16

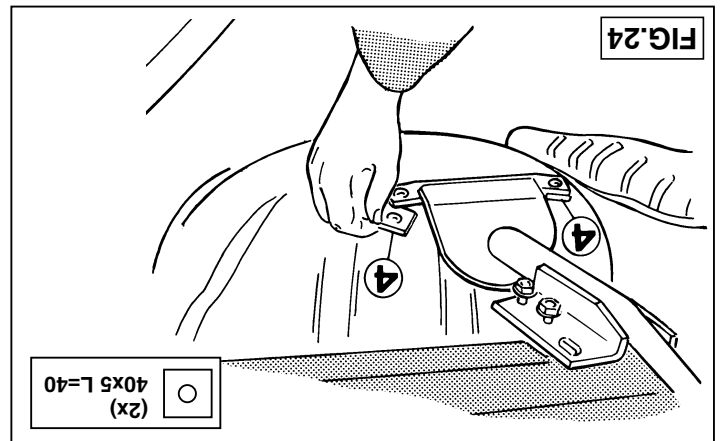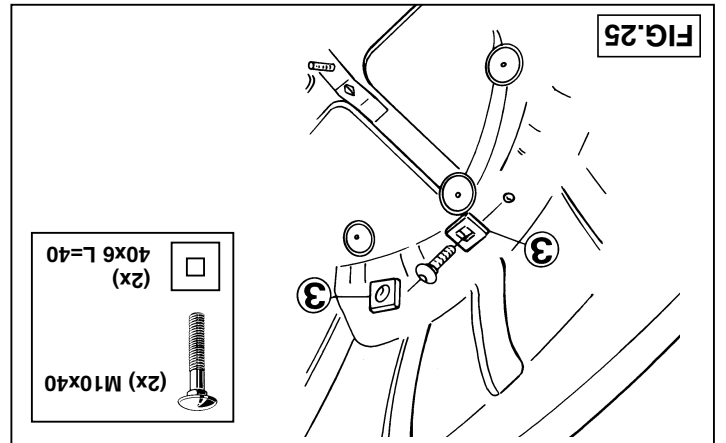
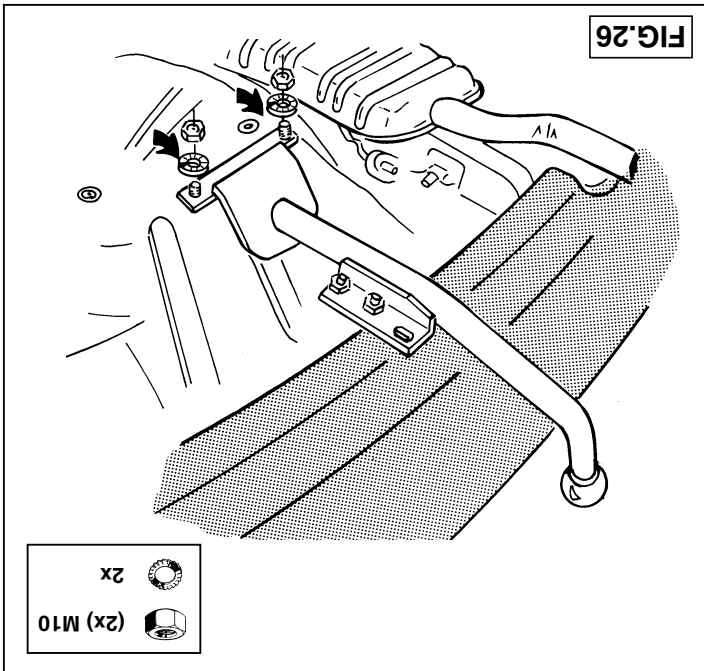
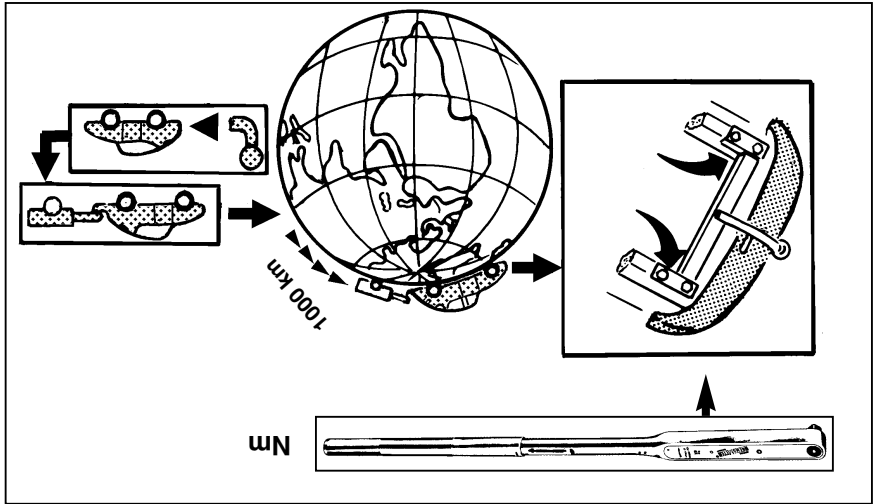
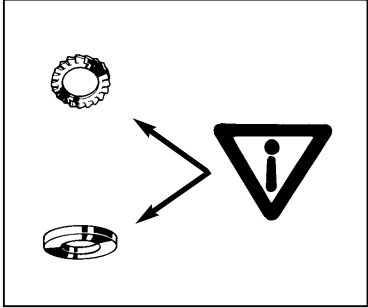
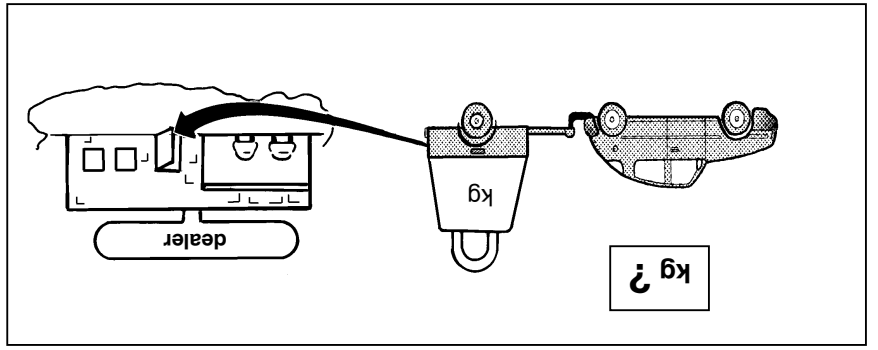
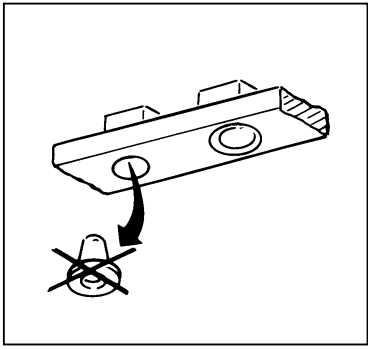




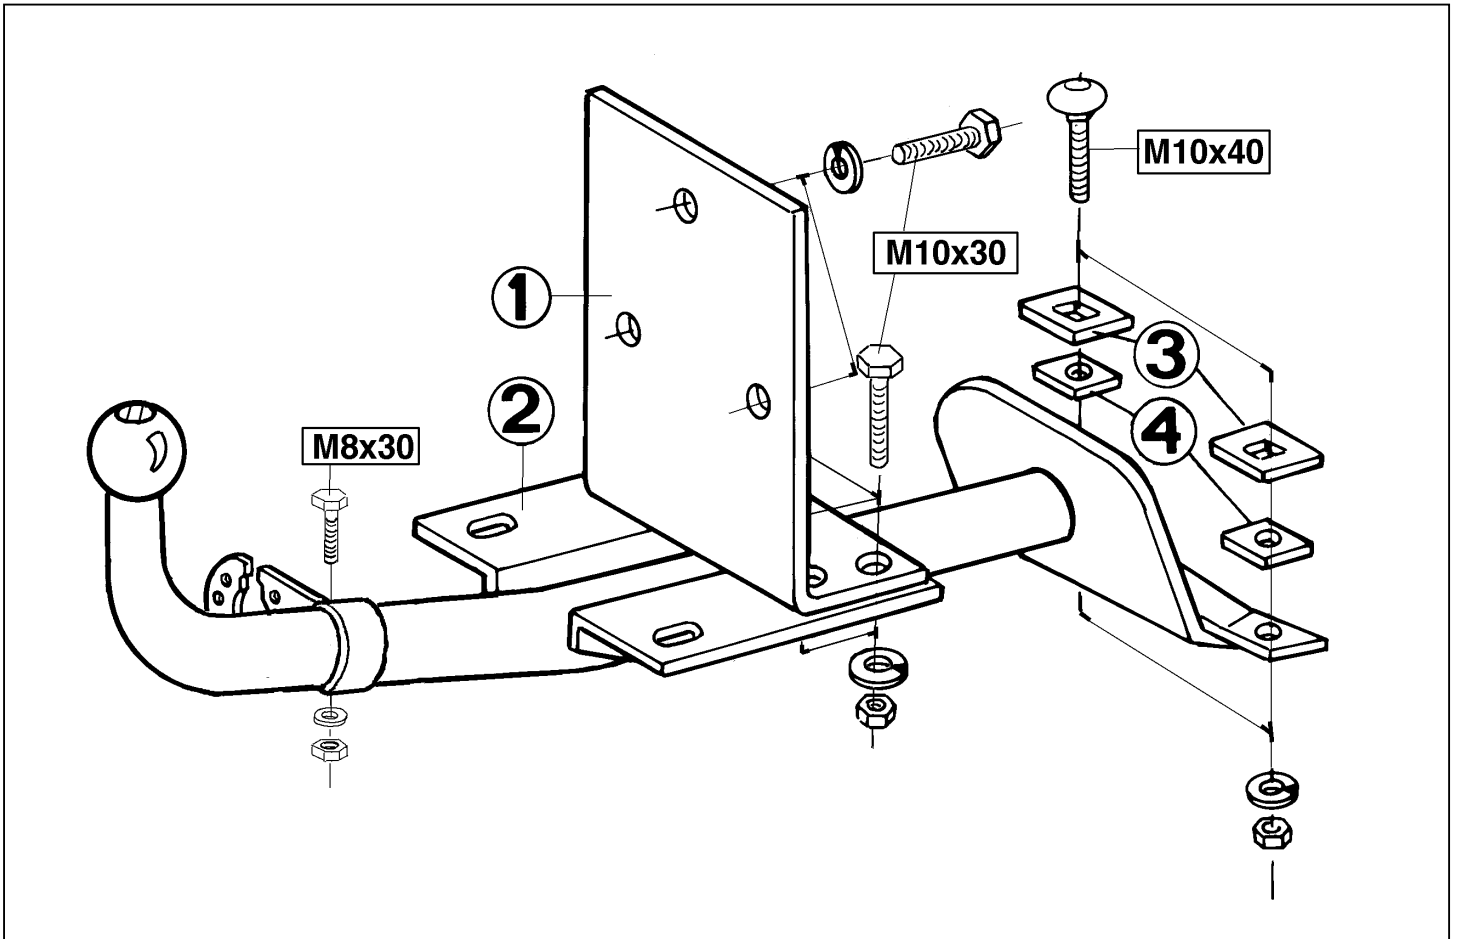


224470/16-08-2001/5


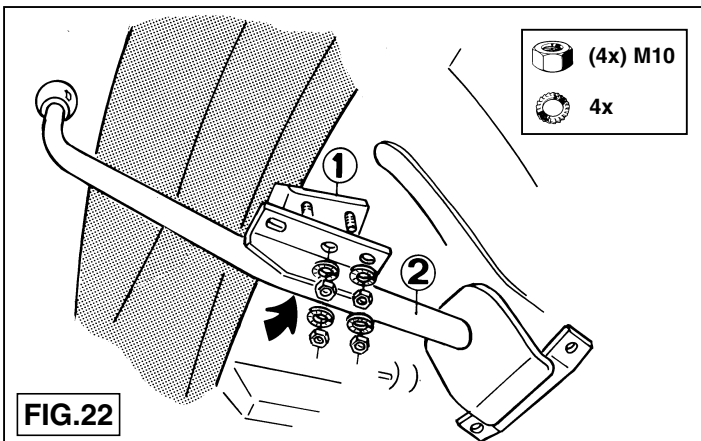
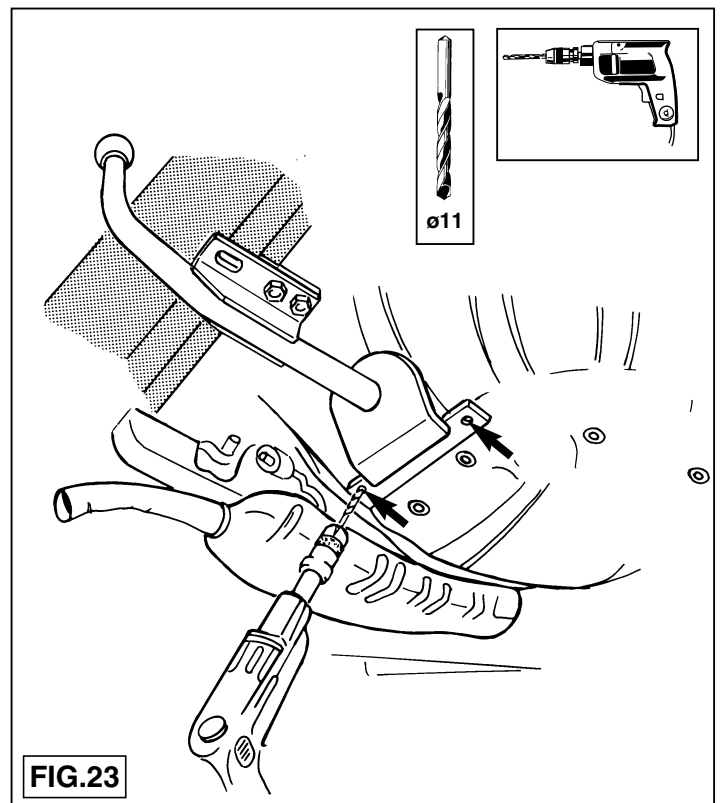
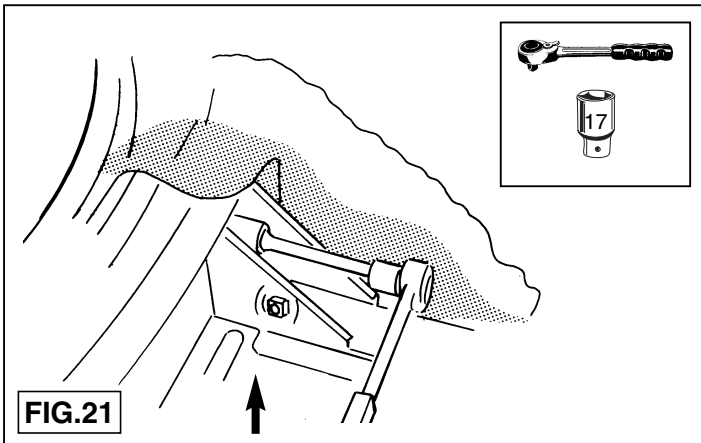


224470/16-08-2001/14

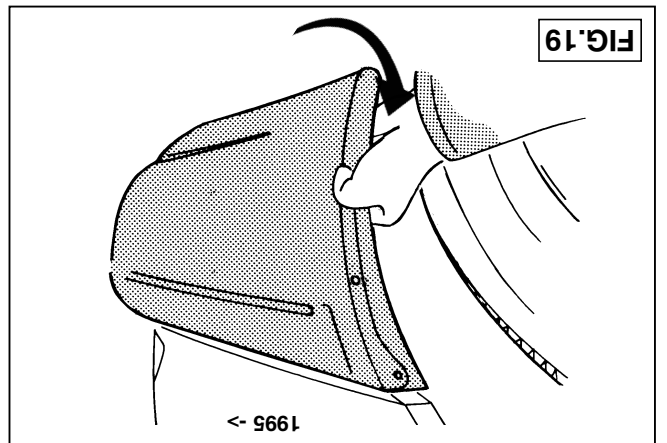
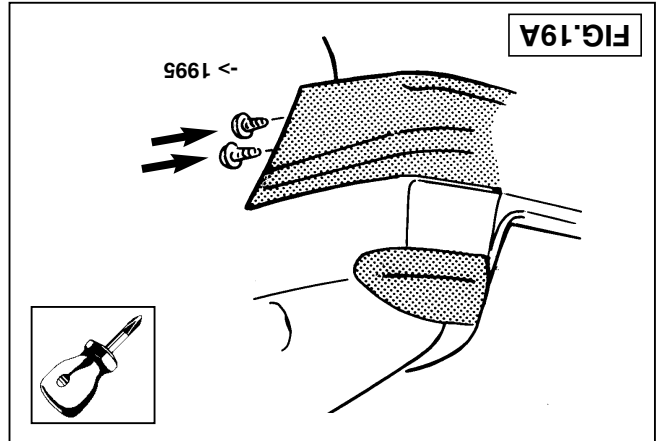
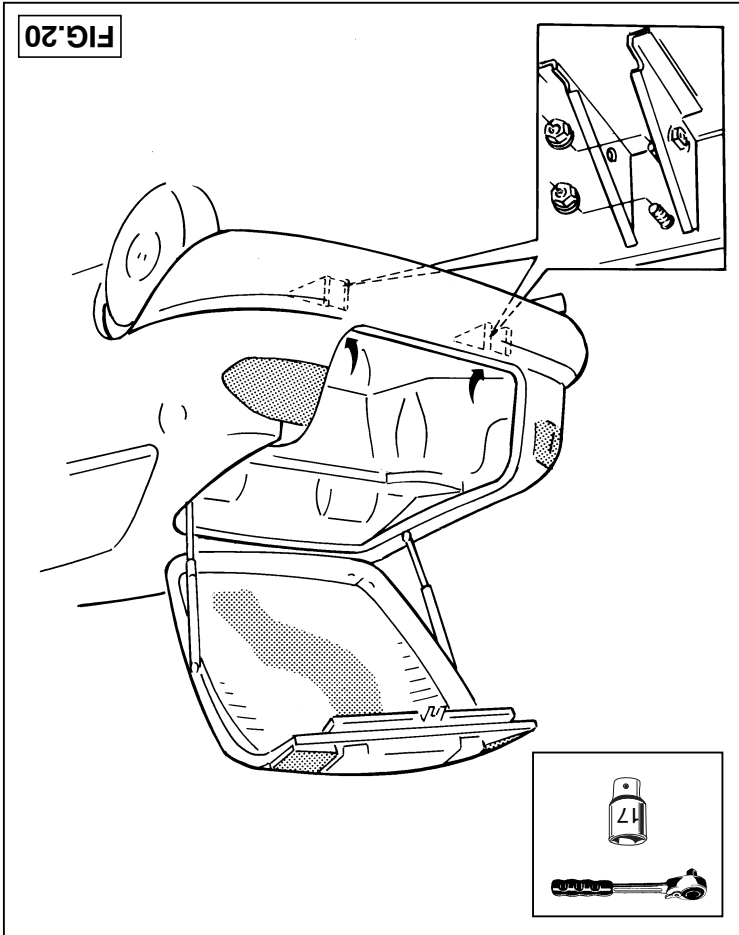
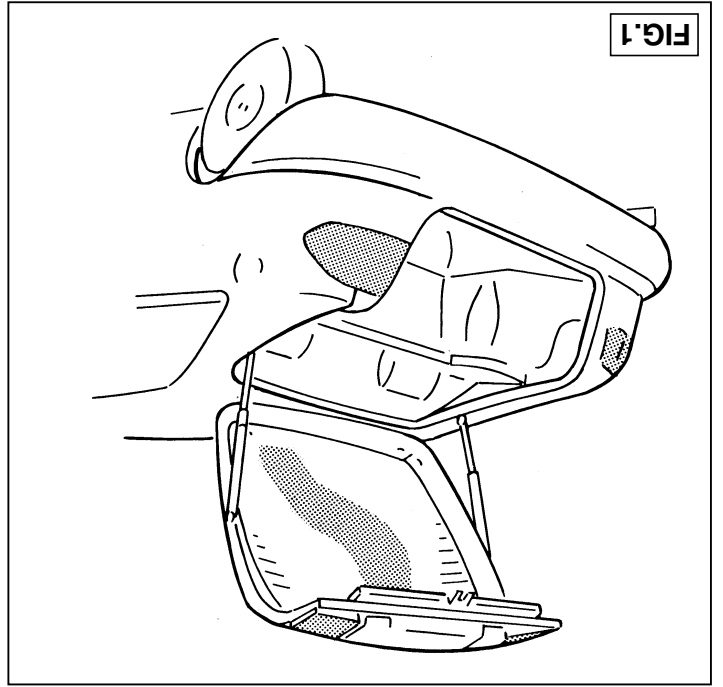
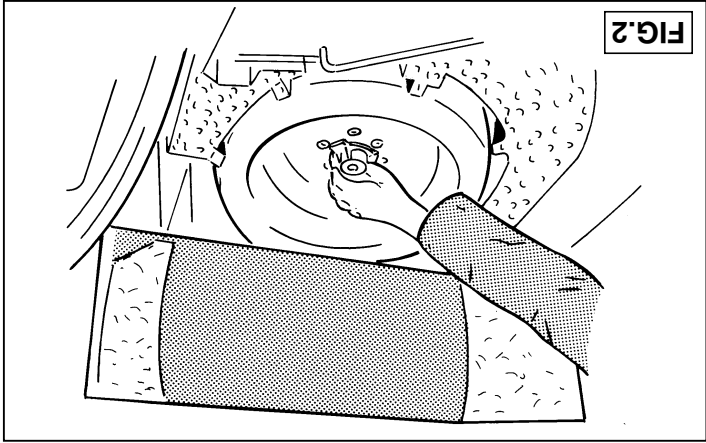
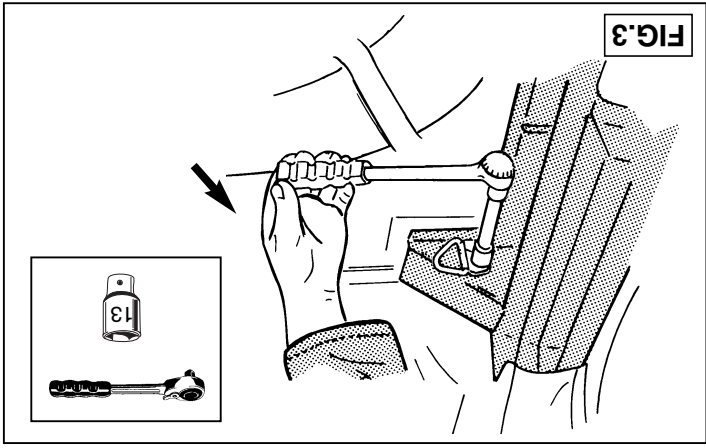


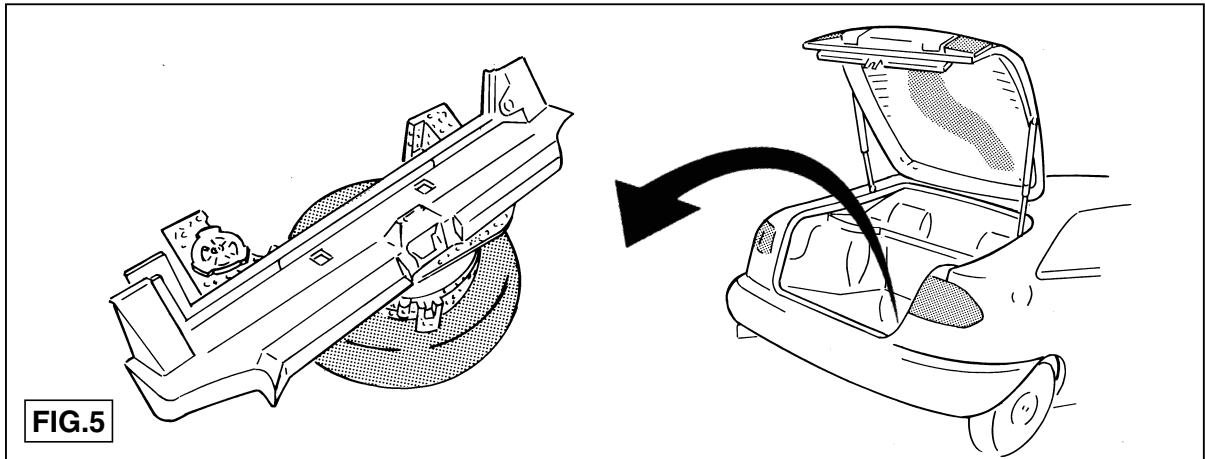
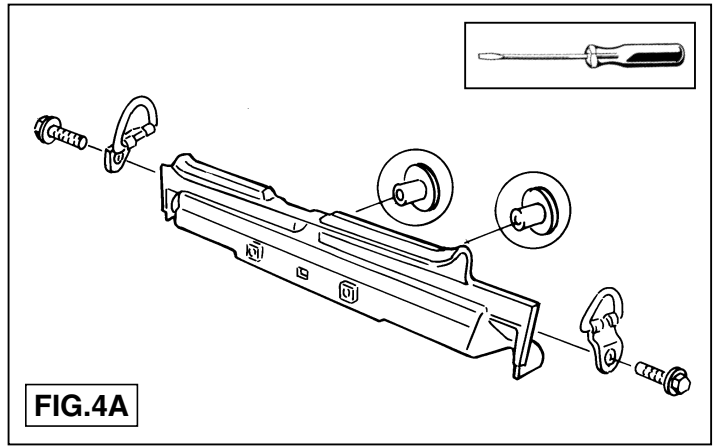
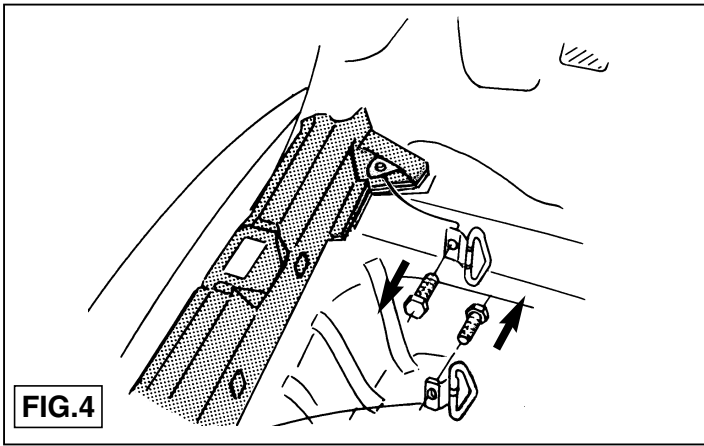


224470/16-08-2001/7

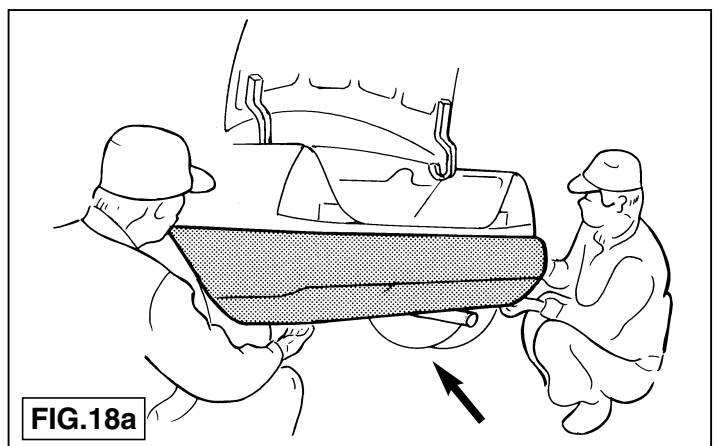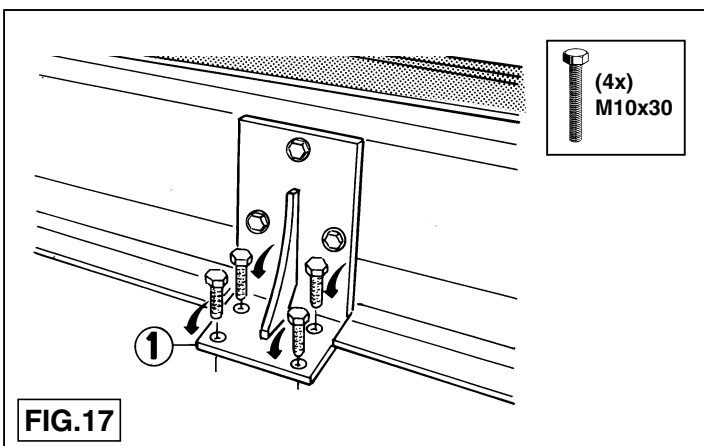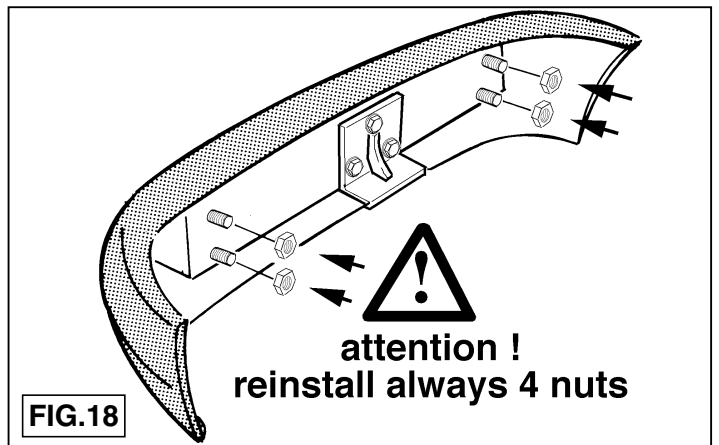
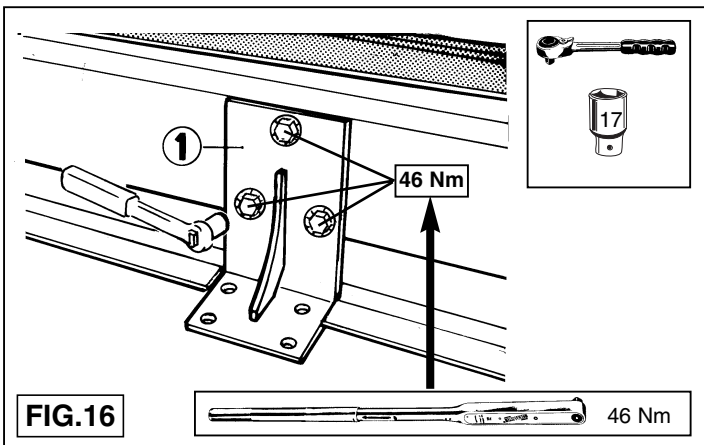


224470/16-08-2001/12

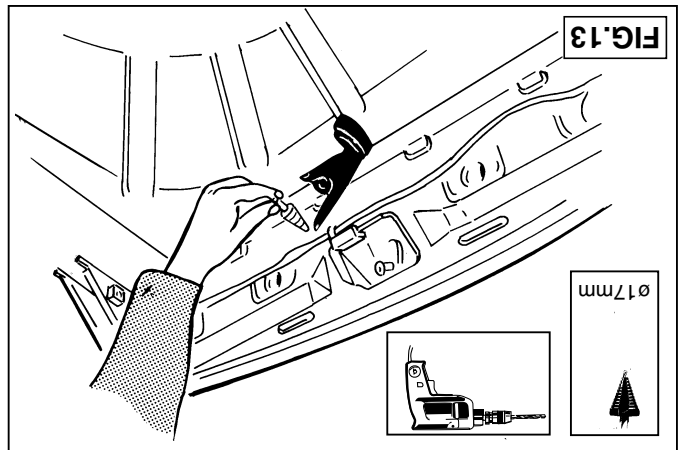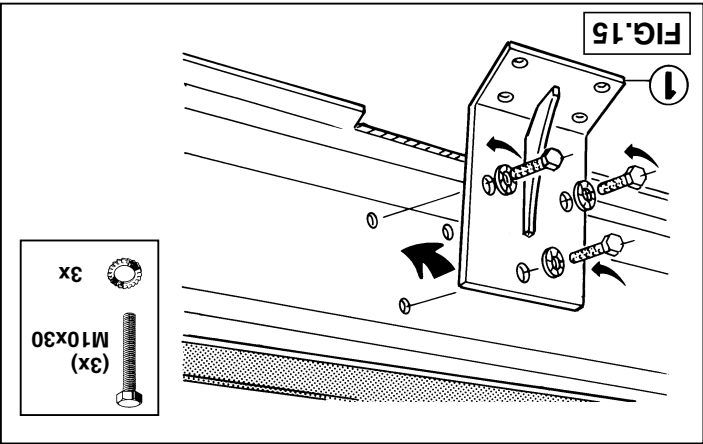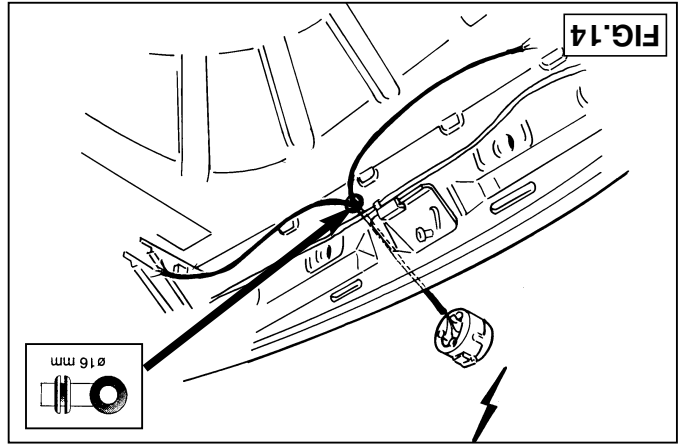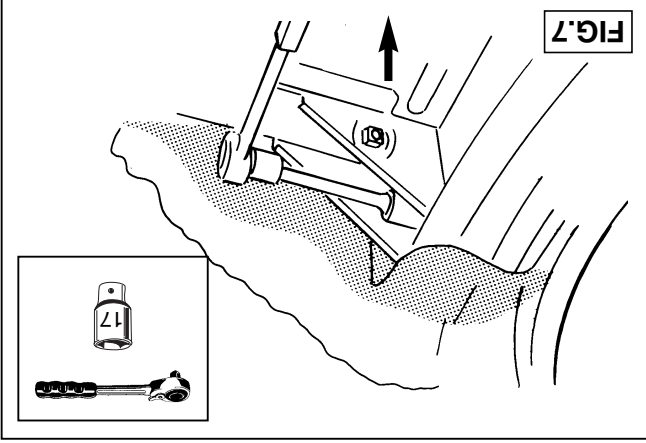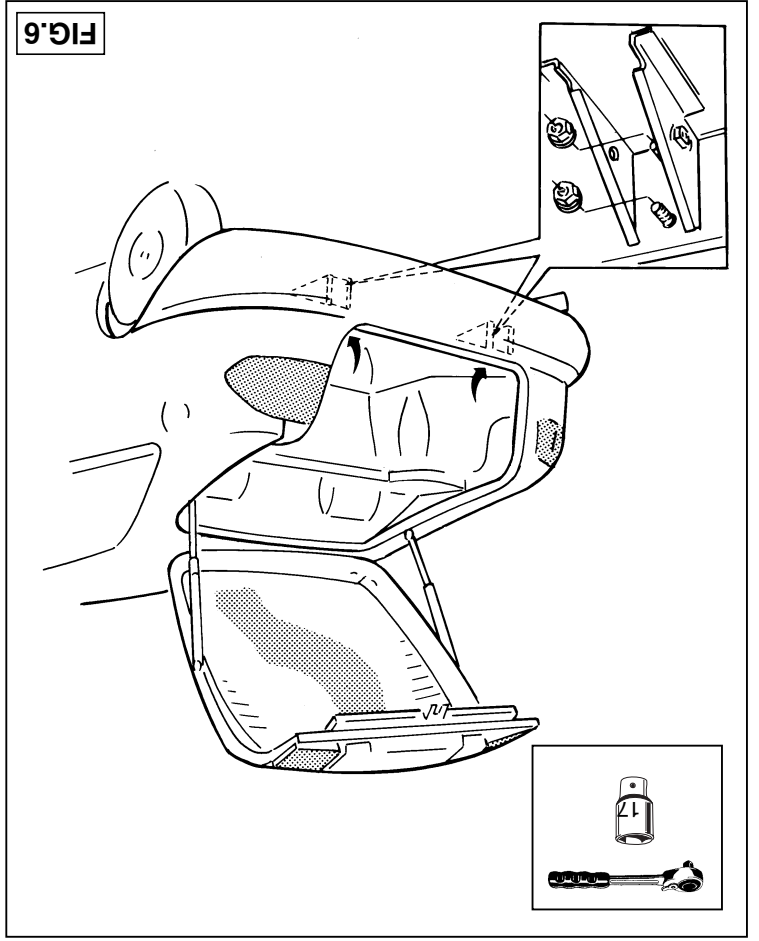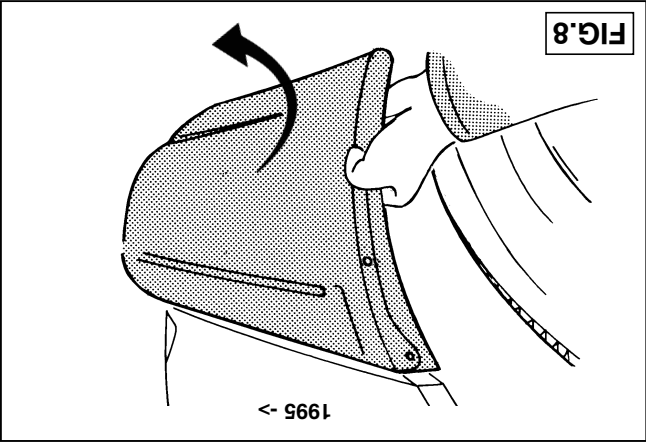

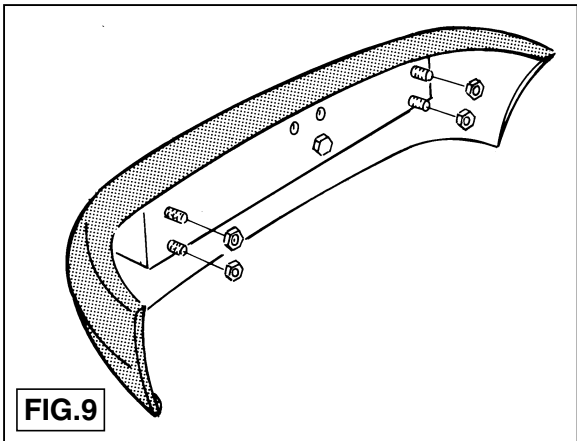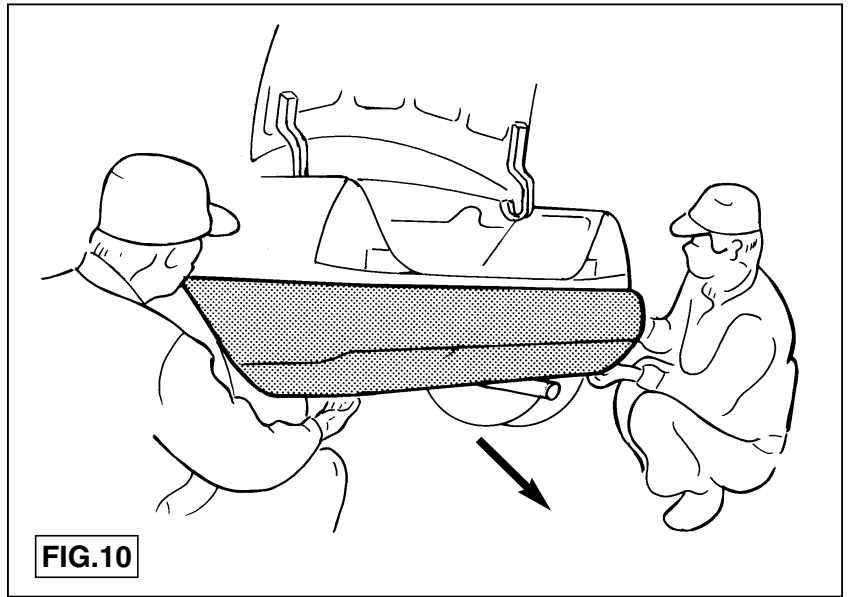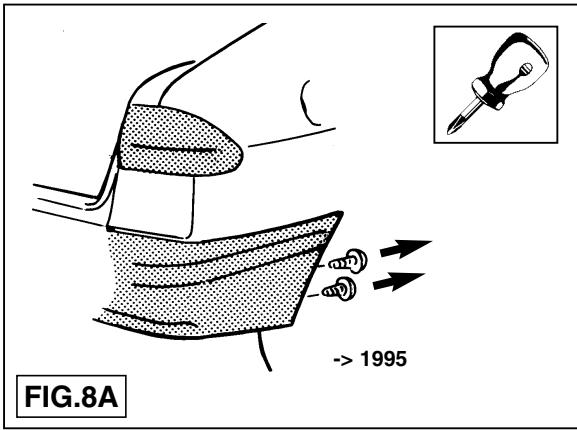

224470/16-08-2001/9

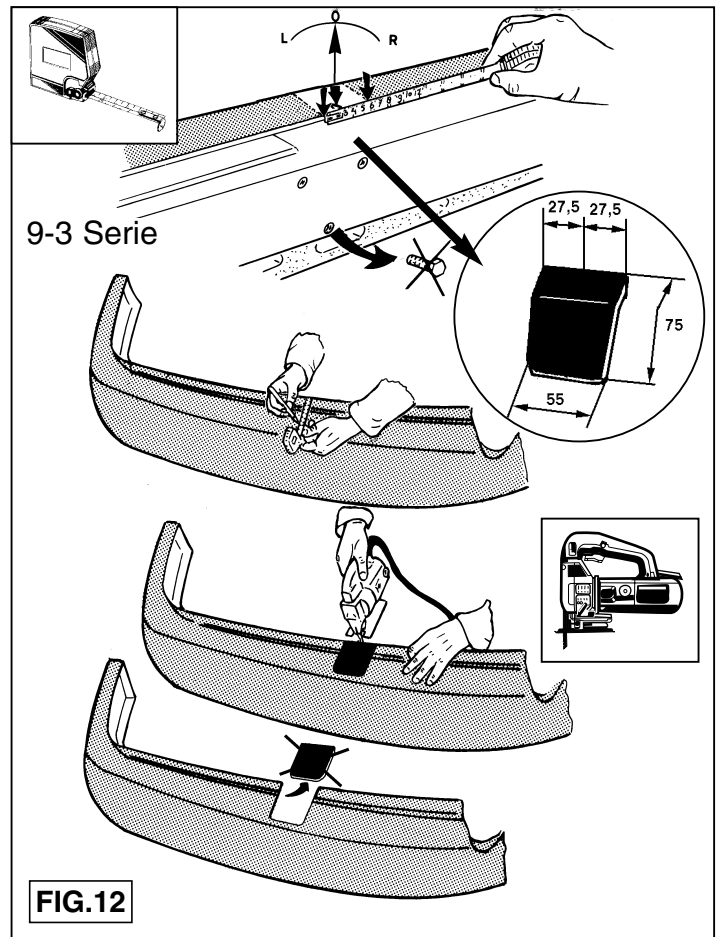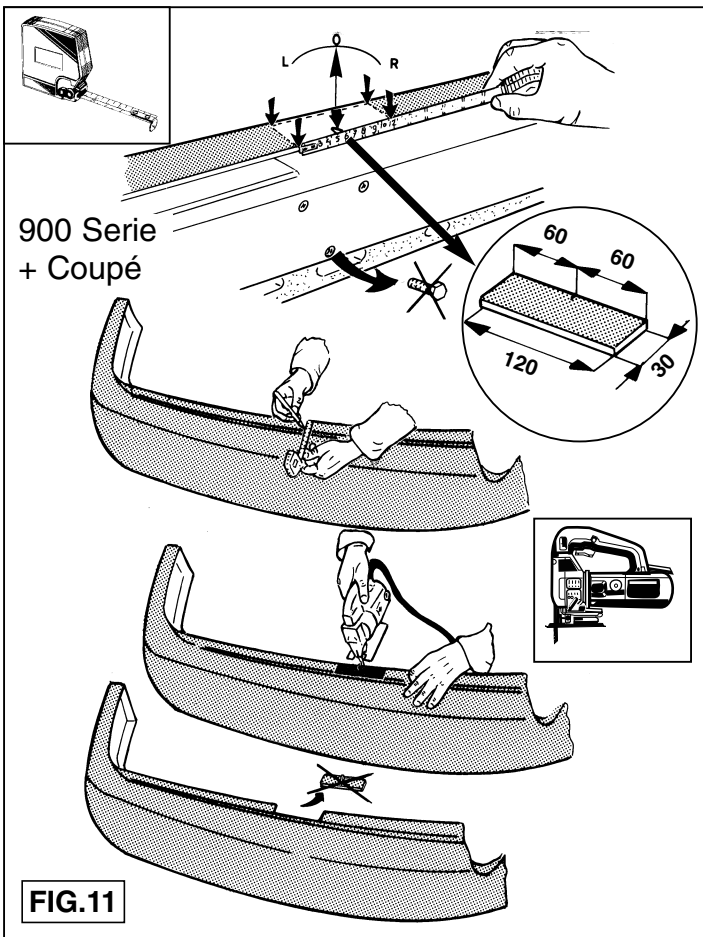

224470/16-08-2001/10