

1

Kit 187010






CITROËN Dispatch, 4-dr Van, 16-
 CITROËN Jumpy, 4-dr Van, 16-
 CITROËN SpaceTourer, 5-dr Bus, 16-
 OPEL Vivaro, 4-dr Van, 19-
 OPEL Zafira Life, 5-dr Bus, 19-
 PEUGEOT Expert, 4-dr Van, 16-

PEUGEOT Traveller, 5-dr Bus, 16-
 TOYOTA ProAce, 4-dr Van, 16-
 TOYOTA ProAce Verso, 5-dr Bus, 16-
 VAUXHALL Vivaro, 4-dr Van, 19-
 VAUXHALL Vivaro Life, 5-dr Bus, 19-




ISO 11154-E


This kit is only for vehicles with fixpoint mounting.

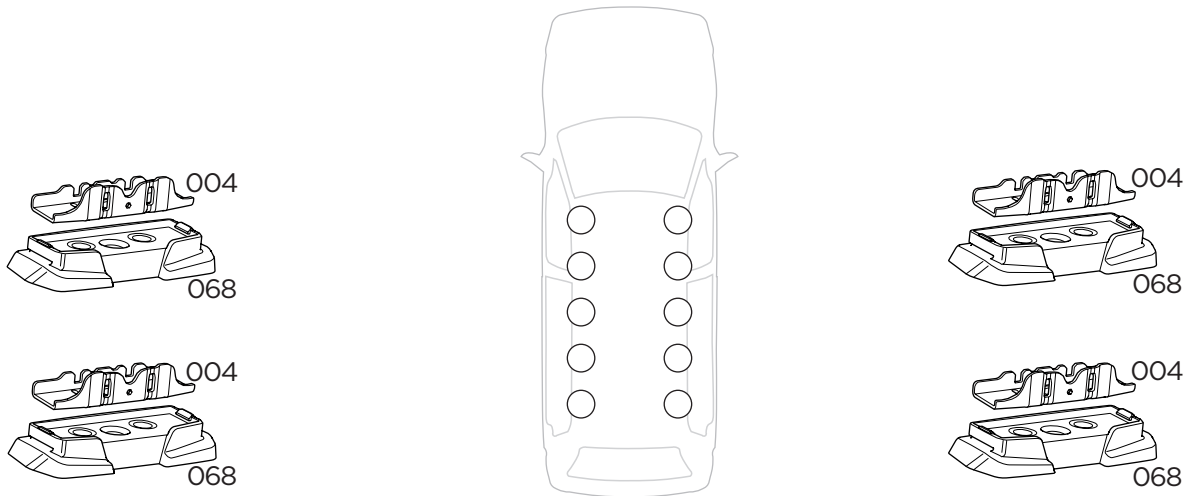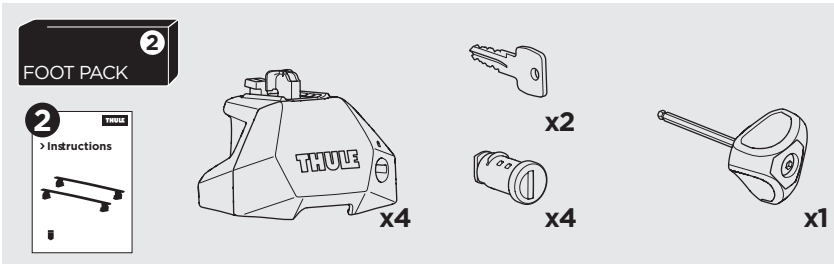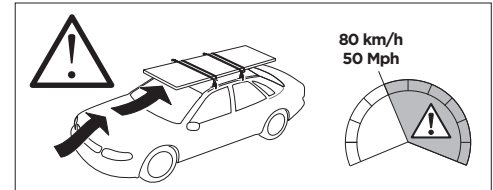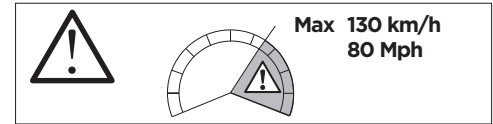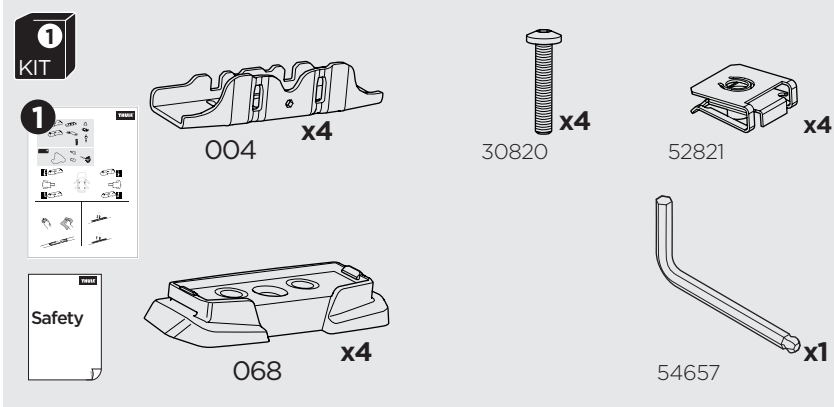



1

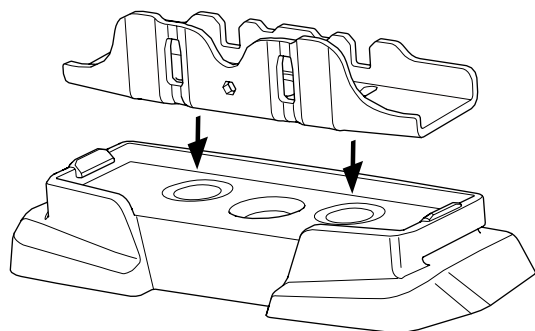


2

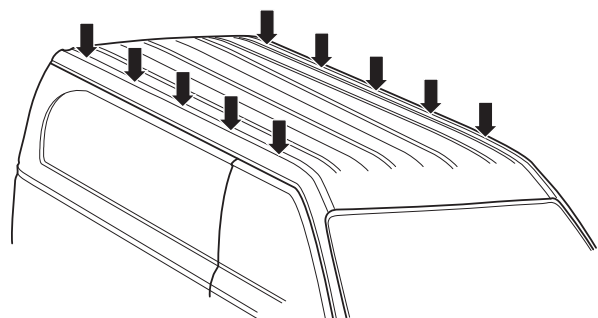

3

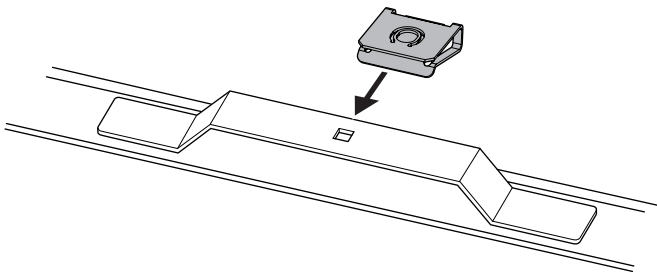



4

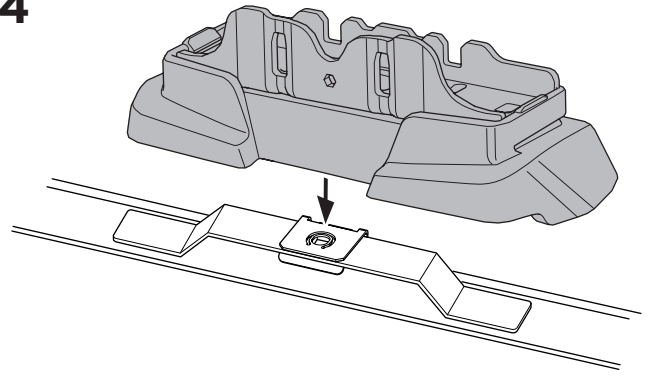

5



8 Nm

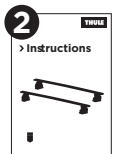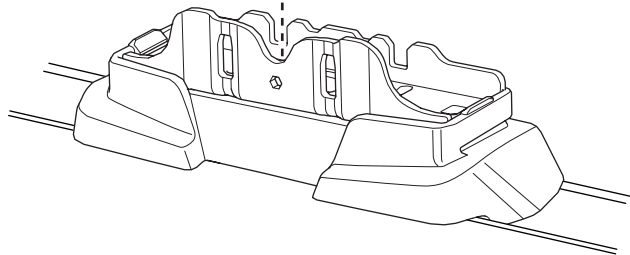

2



i



8 Nm

