


Einbauanleitung Elektrosatz  
Anhängervorrichtung mit 12-N Steckdose  
lt. DIN/ISO Norm 1724


Instructions de montage du faisceau  
électrique pour crochet d'attelage  
conforme à la norme  
DIN/ISO 1724 prise 12-N

Fitting instructions electric wiringkit  
towbar with 12-N socket up to  
DIN/ISO norm 1724

Montage-handleiding elektrokabelset voor  
trekhaak met 12-N contactdoos  
vlgs. DIN/ISO norm 1724

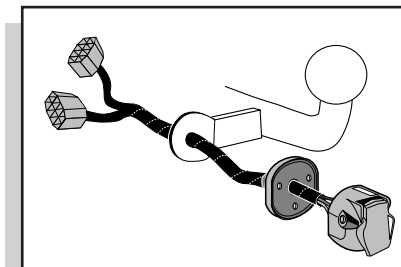

## TOYOTA YARIS VERSO 5d MPV 1999-

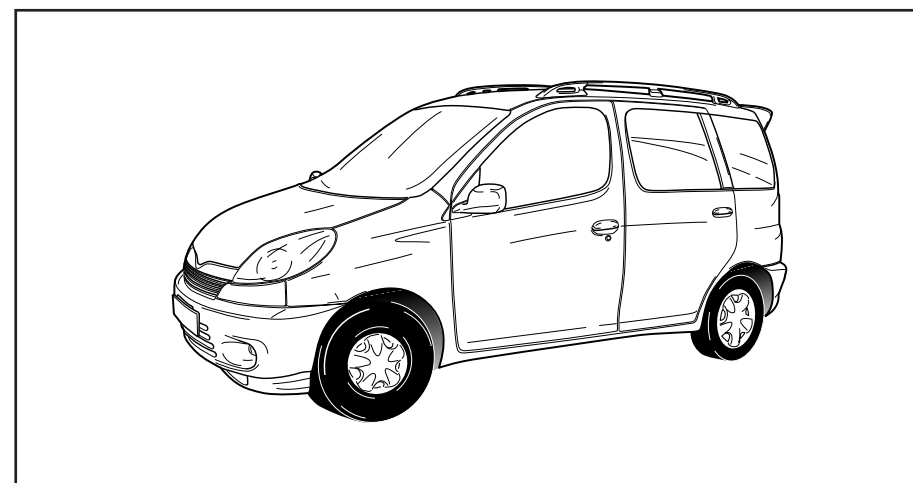







Bestel Nr.: TO-059-BB

\* Teilliste


\* Liste de pieces

\* Part list


\* Onderdelenlijst

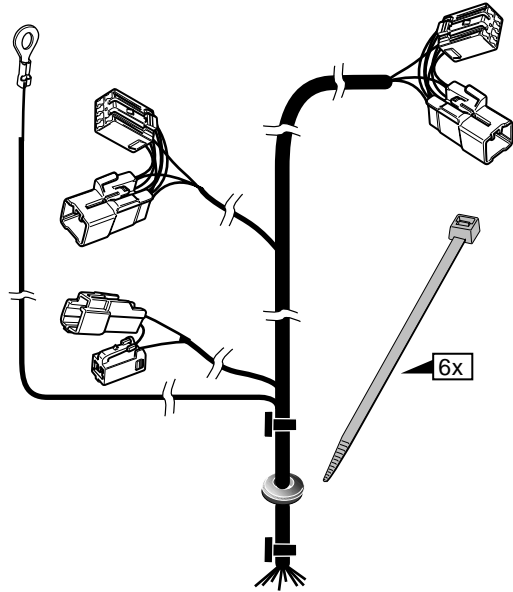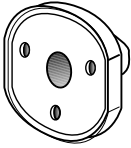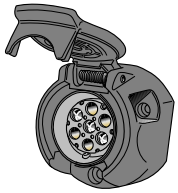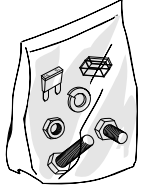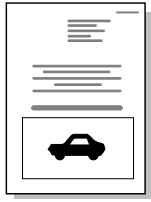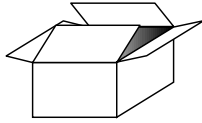





3x










3x

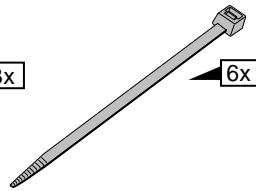


6x

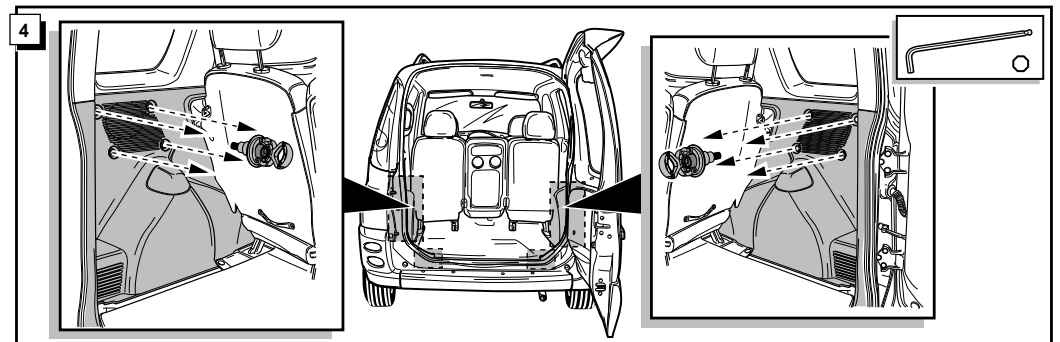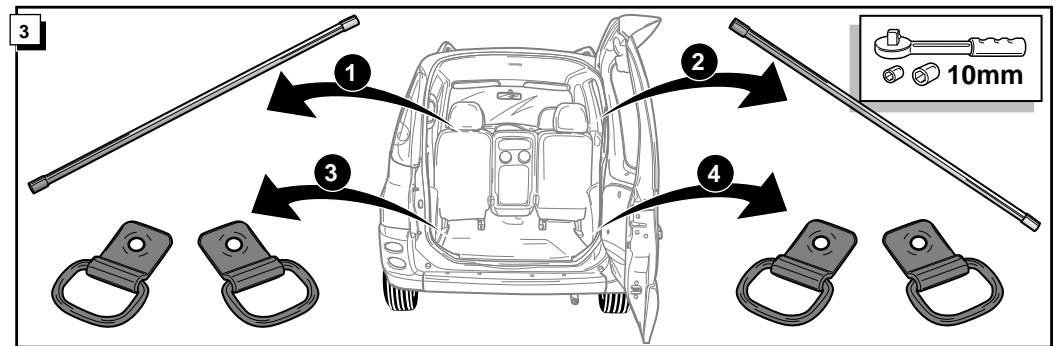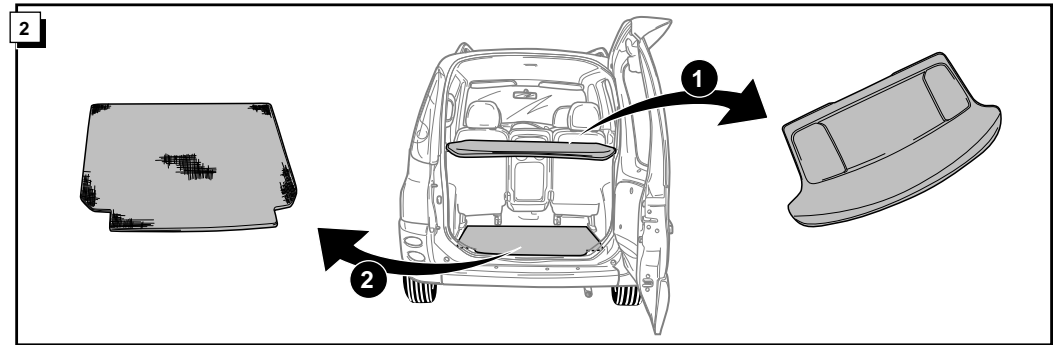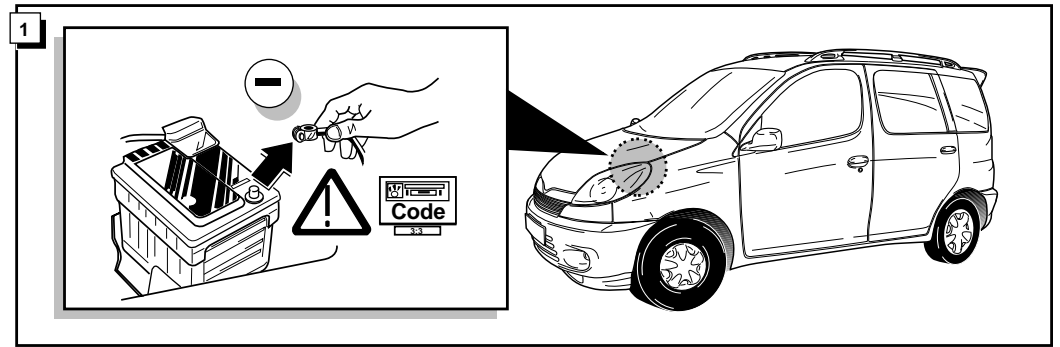

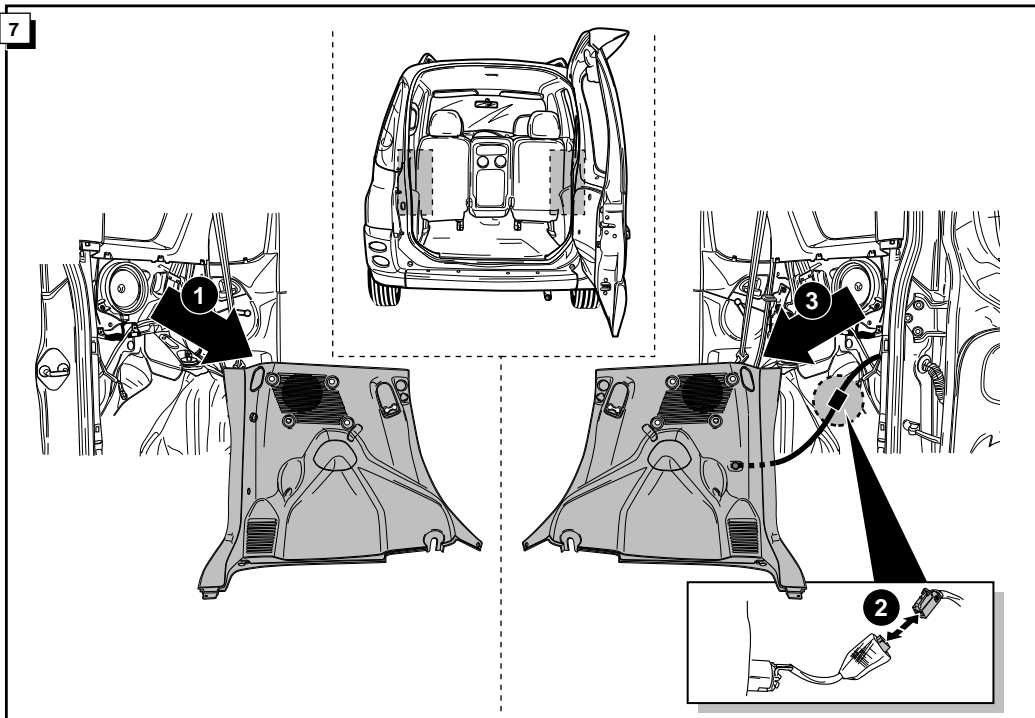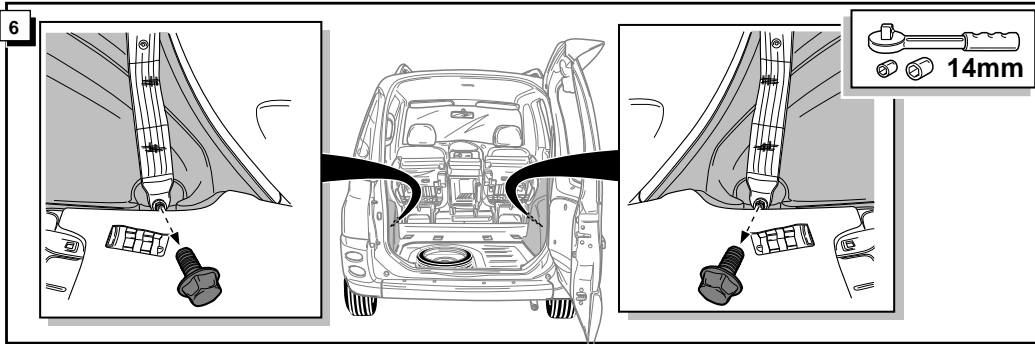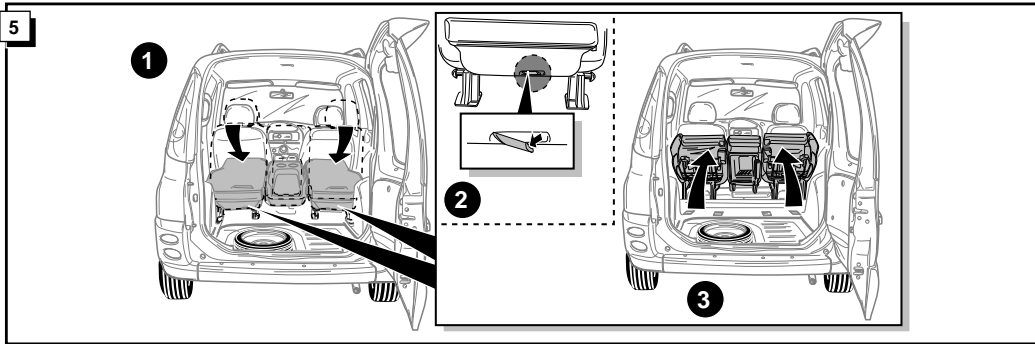


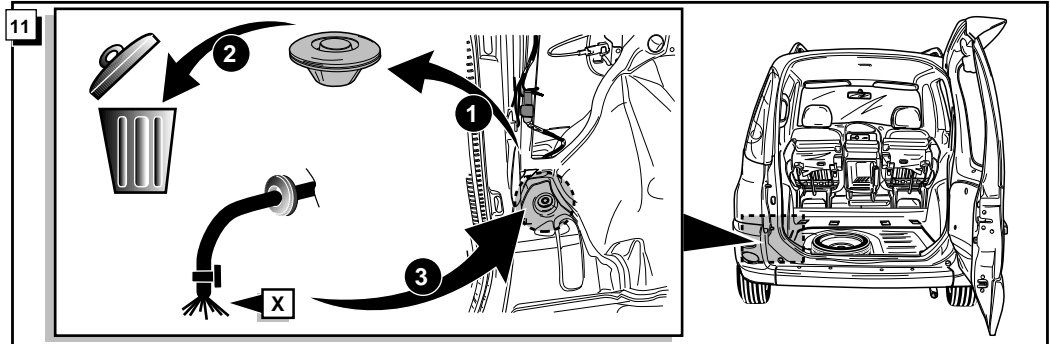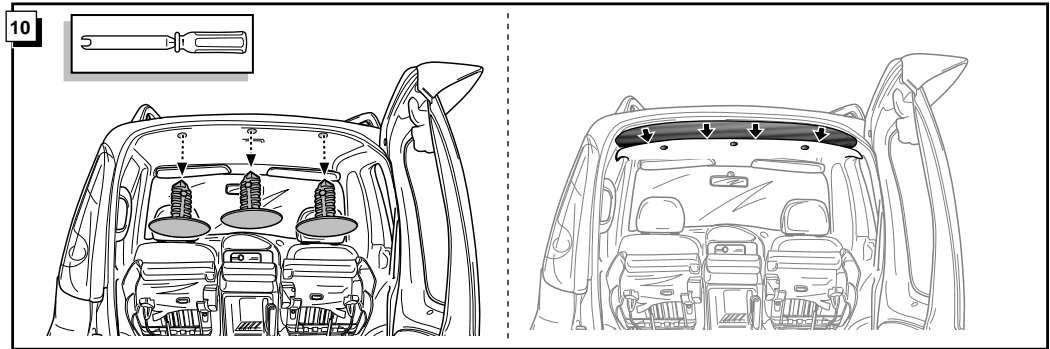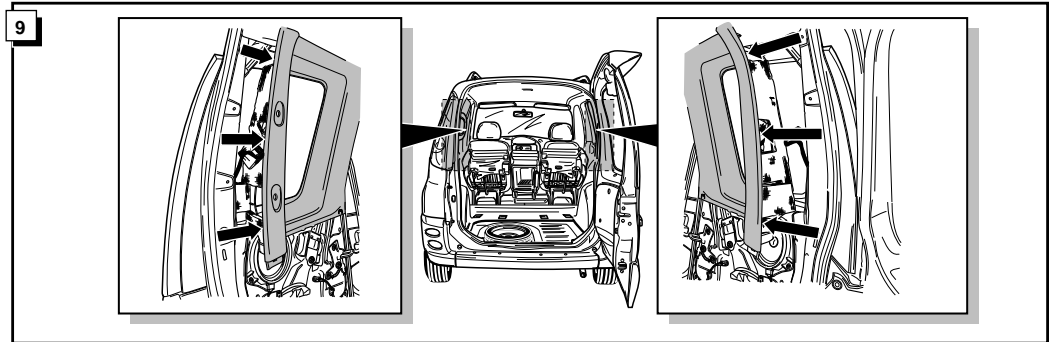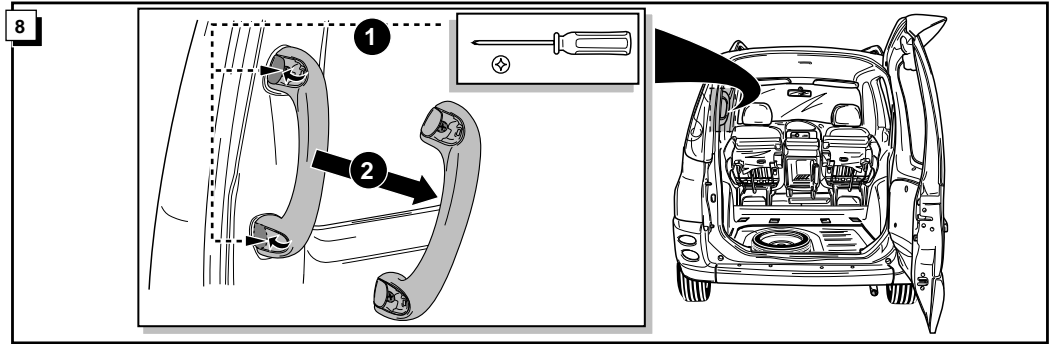


**INFO**

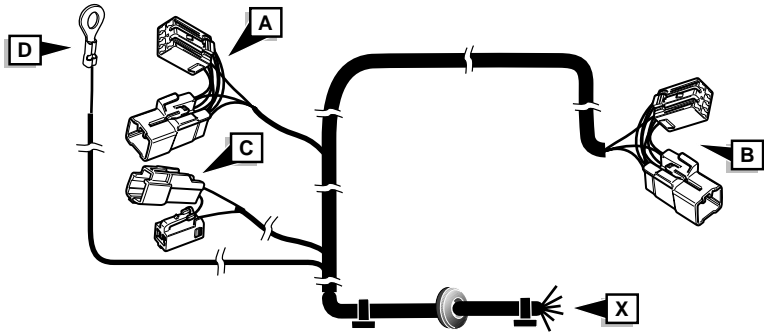


**ROUTING**

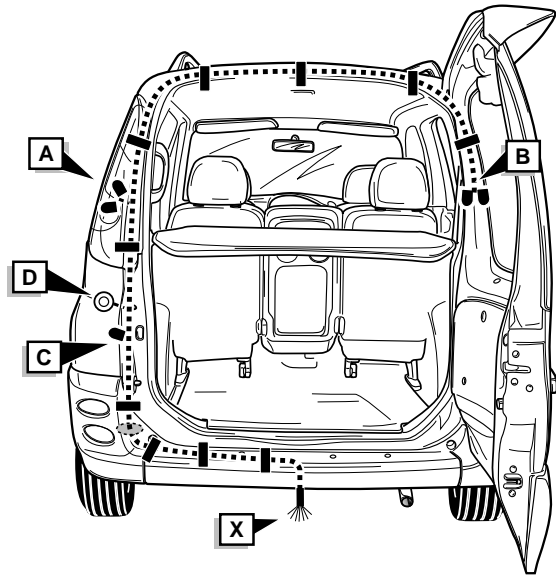


27

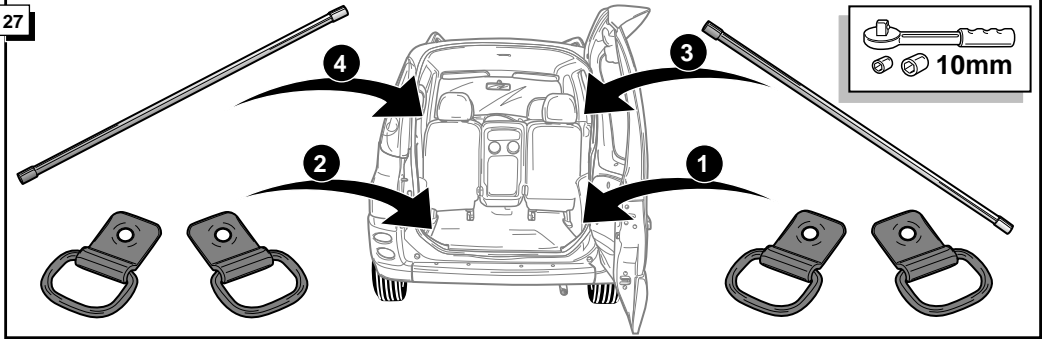


28

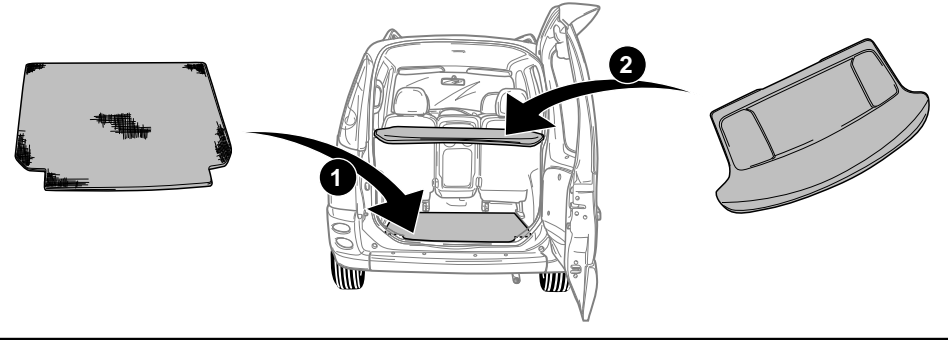


29

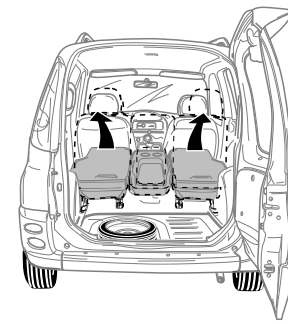


12

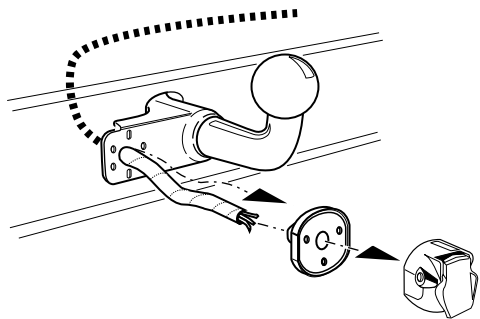


23

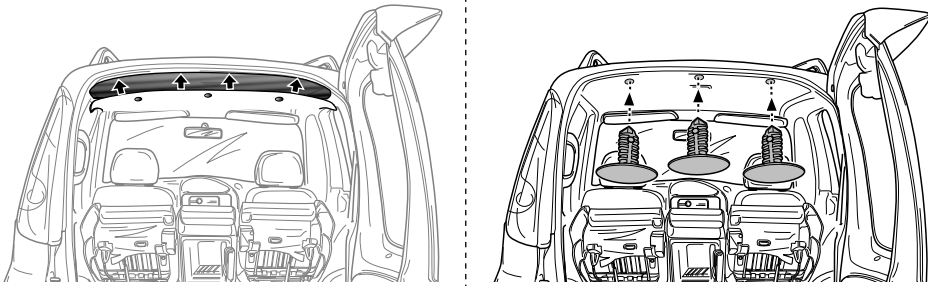


24

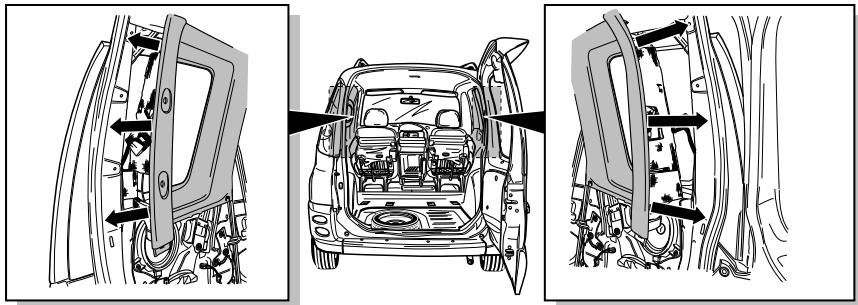

25

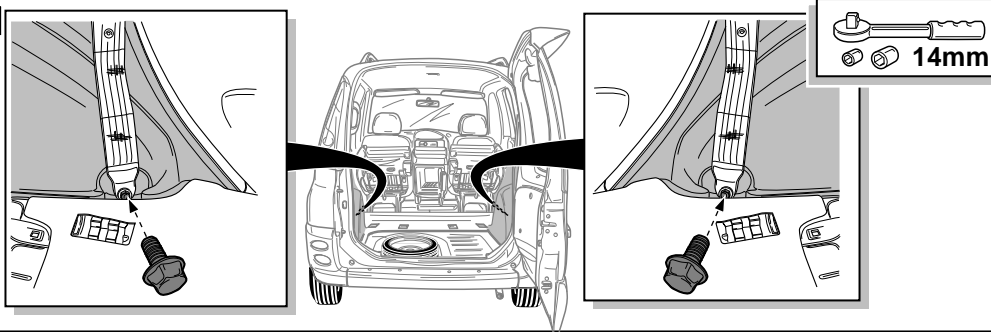


26

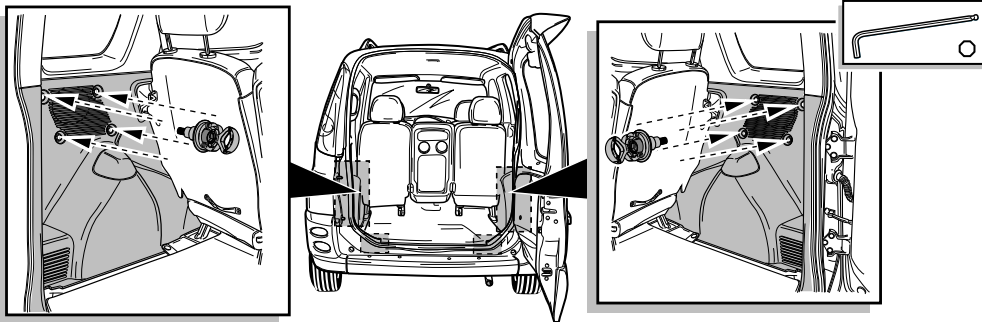

**INFO** Anschluß Steckdose / Connection de la prise / Socket connection / Contactdoos aansluiting








DIN/ISO 1724		D	F	GB	NL
	1/L	gelb	jaune	yellow	geel
	2	blau	bleu	blue	blauw
	1-8	weiß	blanc	white	wit
	4/R	grün	vert	green	groen
	5/58-R	braun	marron	brown	bruin
	6/54	rot	rouge	red	rood
	7/58-L	schwarz	noir	black	zwart
	8/58-b	grau	gris	grey	grijs

13

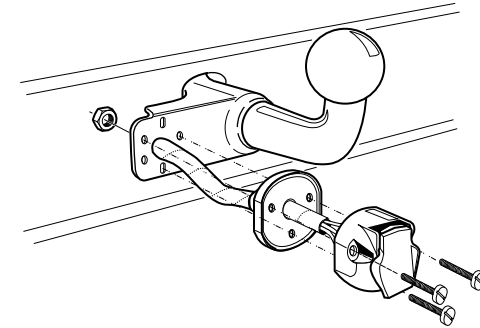

14

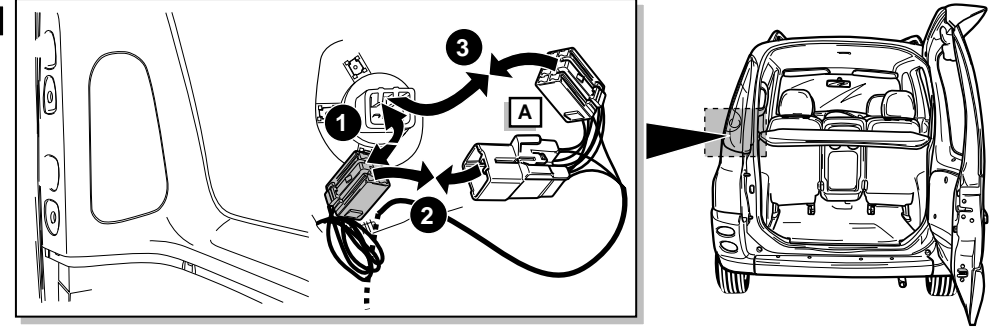

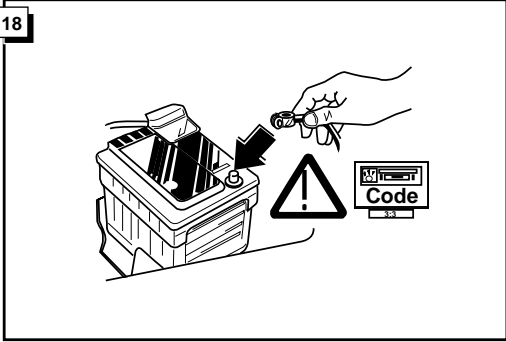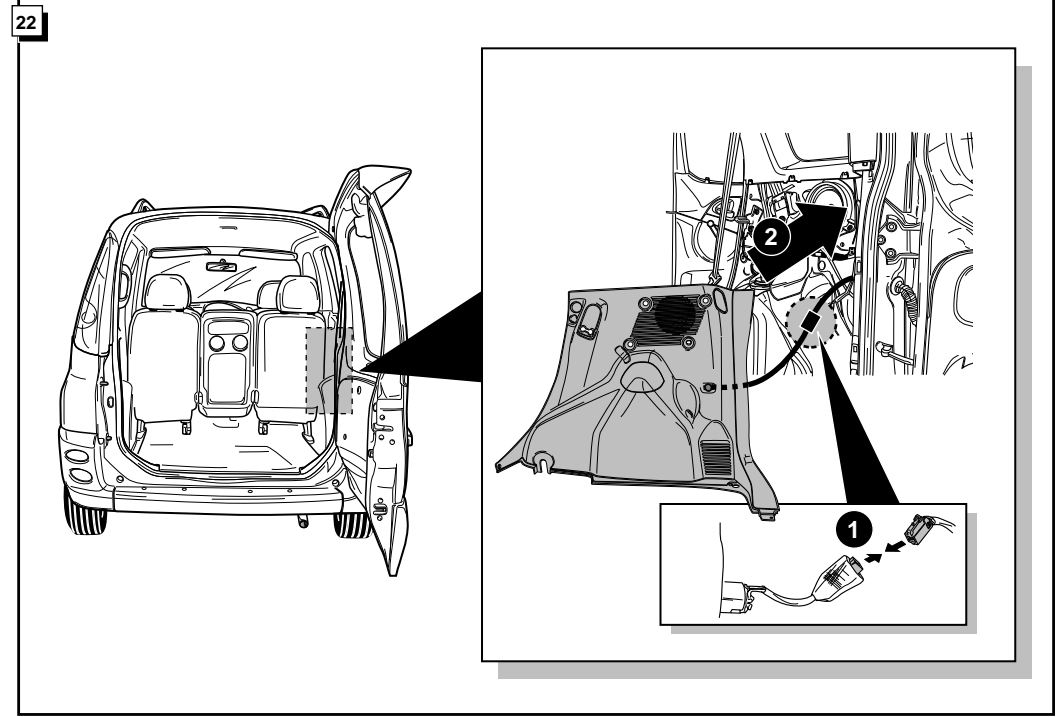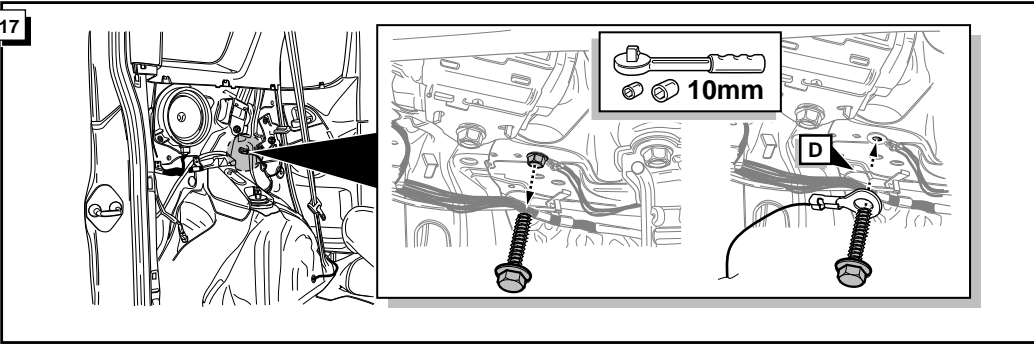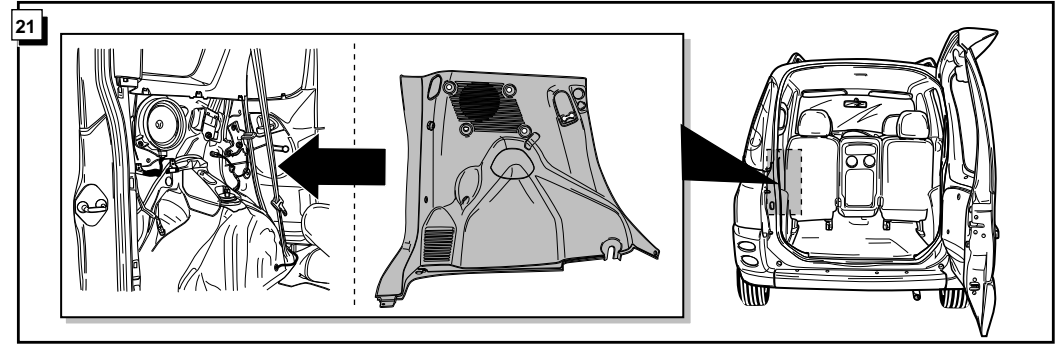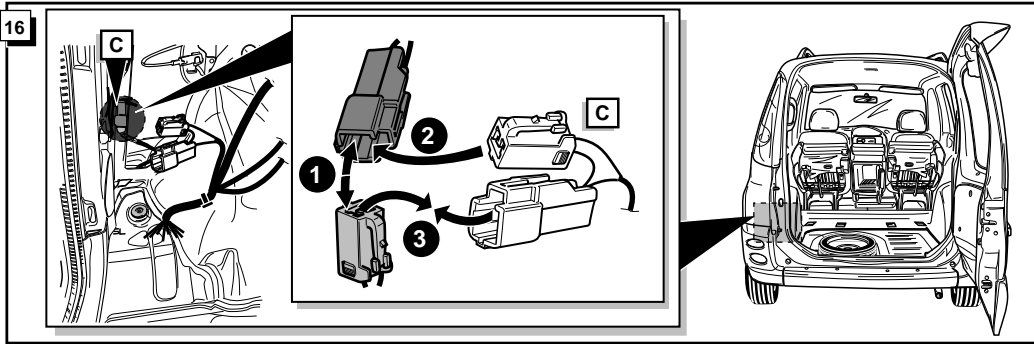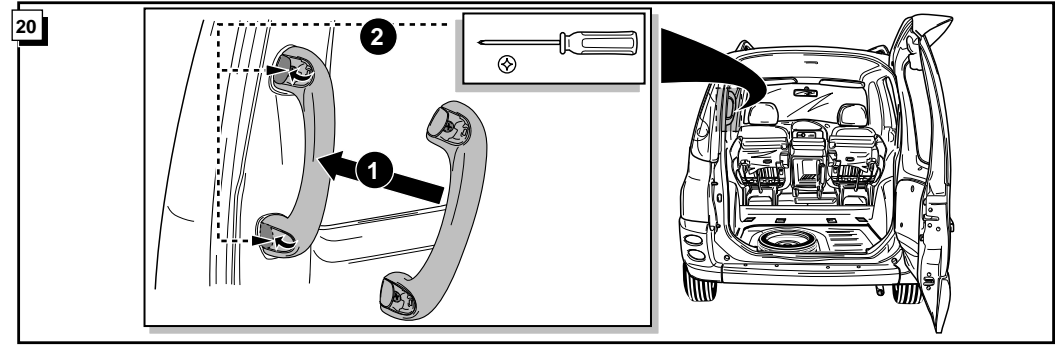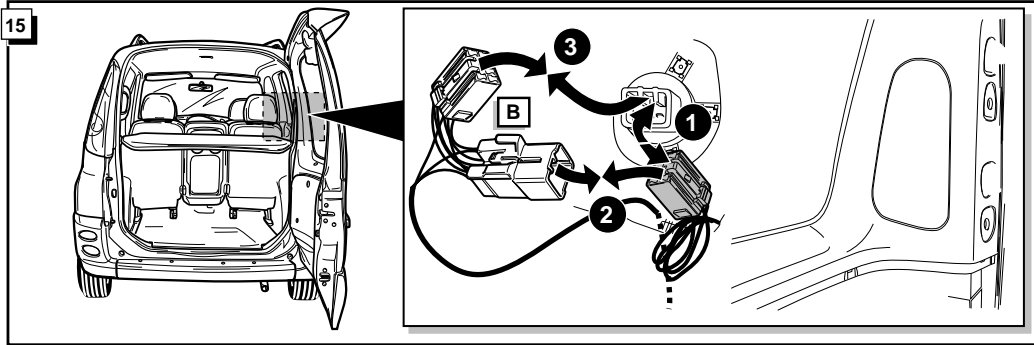

19

**!** CHECK FUNCTIONS !  
 FUNKTIONEN KONTROLLIEREN !  
 CONTROLEER FUNCTIES !  
 CONTRÔLER LES FONCTIONS !