







Thule Rapid System Kit 1312

> Instructions

Honda Fit, 5-dr Hatchback, 02-04, 05-07 / *07-08

Honda Jazz, 5-dr Hatchback, 02-04, 05-08

*North America

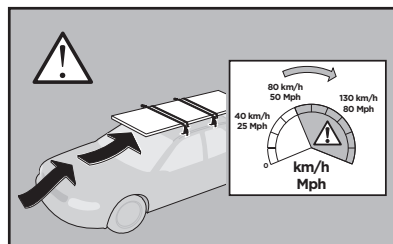
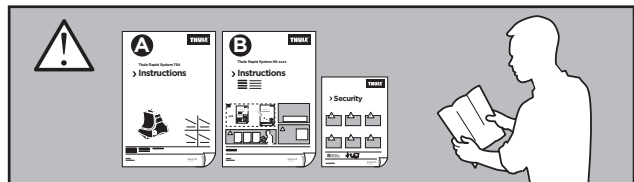
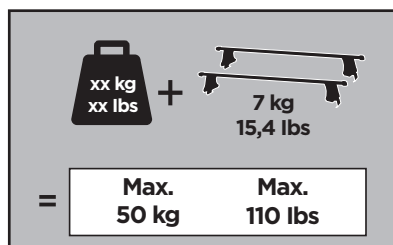
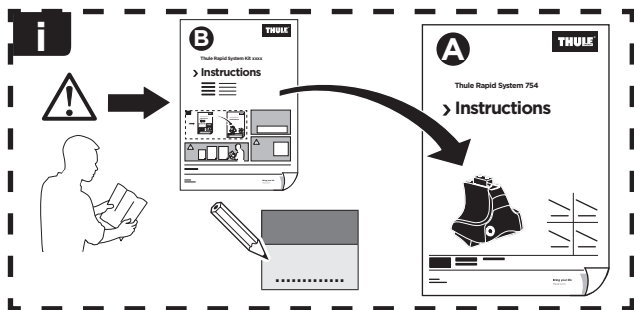


ISO 11154-E

141312

C.20130625
519-1312-02

Bring your life
thule.com

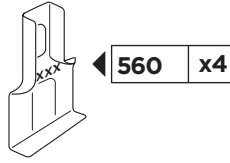



x1



x1

1

	X (scale)	X (mm)	X (inch)
HONDA Fit , 5-dr Hatchback, 02-04, 05-07 / *07-08	30,5	956	37 5/8
HONDA Jazz , 5-dr Hatchback, 02-04, 05-08	30,5	956	37 5/8

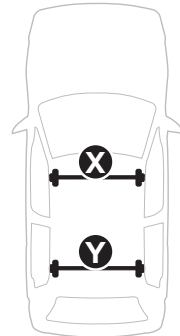
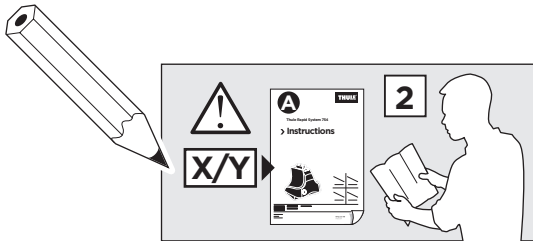


	Y (scale)	Y (mm)	Y (inch)
HONDA Fit , 5-dr Hatchback, 02-04, 05-07 / *07-08	26,5	916	36 1/8
HONDA Jazz , 5-dr Hatchback, 02-04, 05-08	26,5	916	36 1/8


2

HONDA Fit, 5-dr Hatchback, 02-04, 05-07 / *07-08

HONDA Jazz, 5-dr Hatchback, 02-04, 05-08

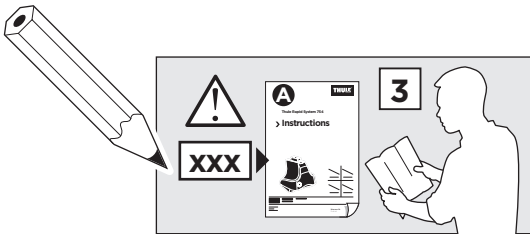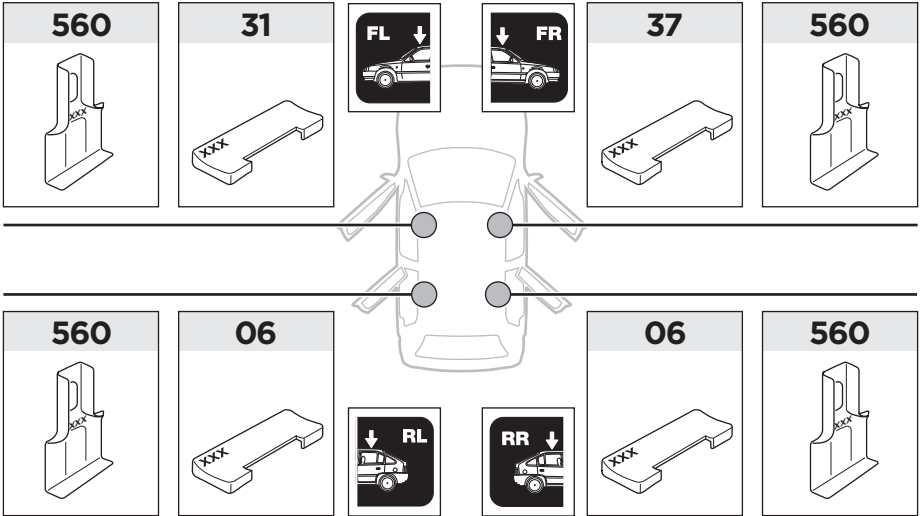

3

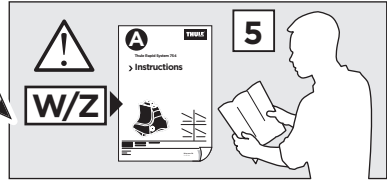

	W (mm)	Z (mm)	W (inch)	Z (inch)
HONDA Fit , 5-dr Hatchback, 02-04, 05-07 / *07-08	300	700	11 ³/₄	27 ¹/₄
HONDA Jazz , 5-dr Hatchback, 02-04, 05-08	300	700	11 ³/₄	27 ¹/₄

