
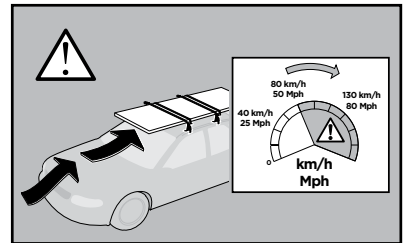
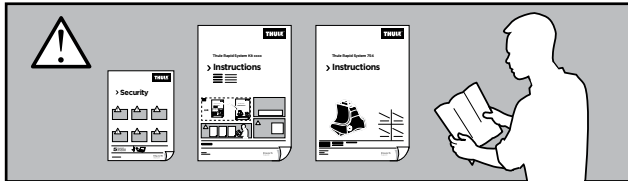
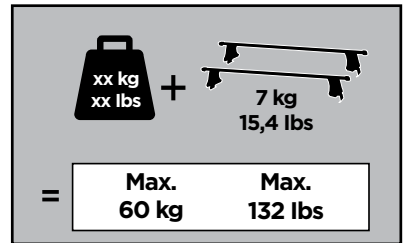


Thule Rapid System Kit 1328

> Instructions


VW Touran, 5-dr MPV, 03-15

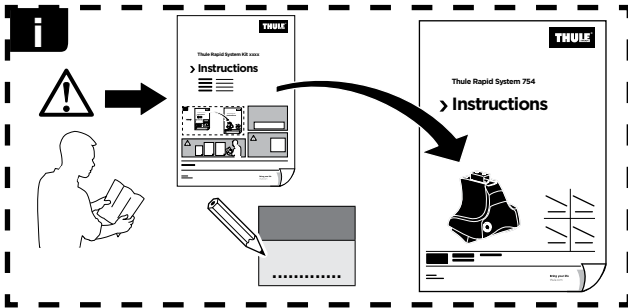

ISO 11154-E



07 x2




571 x2




x1

65 x2





572 x2



x1

1



	X (scale)	X (mm)	X (inch)
VW Touran, 5-dr MPV, 03-15	46	1111	43 ³ / ₄

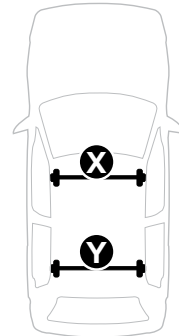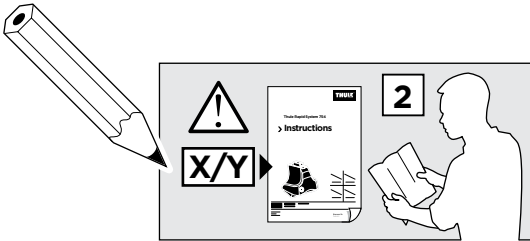


	Y (scale)	Y (mm)	Y (inch)
VW Touran, 5-dr MPV, 03-15	42,5	1076	42 ³ / ₈

2

VW Touran, 5-dr MPV, 03-15

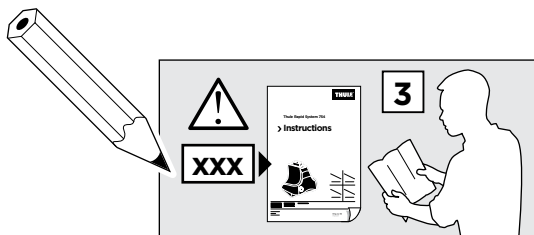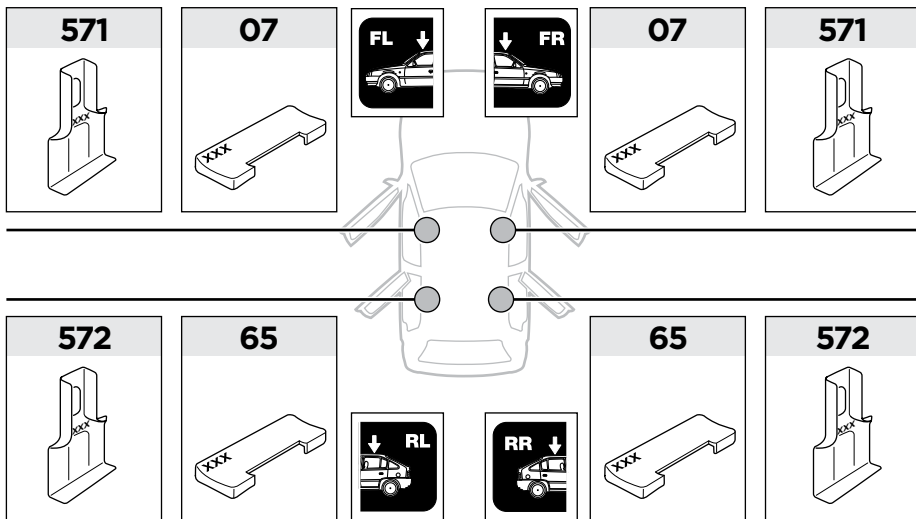

3

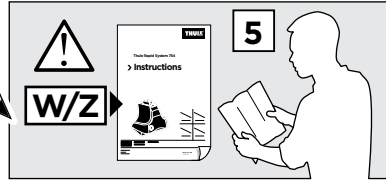

	W (mm)	Z (mm)	W (inch)	Z (inch)
VW Touran, 5-dr MPV, 03-15	400	770	15 ³/₄	30 ³/₈

