


Einbauanleitung Elektrosatz
Anhängervorrichtung mit 12-N Steckdose
lt. DIN/ISO Norm 1724


Instructions de montage du faisceau
électrique pour crochet d'attelage
conforme à la norme
DIN/ISO 1724 prise 12-N

Fitting instructions electric wiringkit
towbar with 12-N socket up to
DIN/ISO norm 1724

Montage-handleiding elektrokabelset voor
trekhaak met 12-N contactdoos
vlgs. DIN/ISO norm 1724

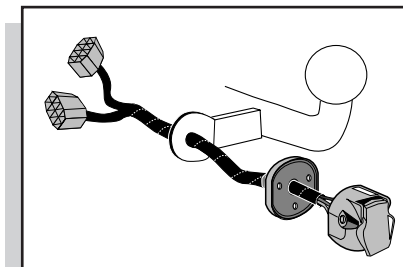

HYUNDAI SANTA FE 2001-

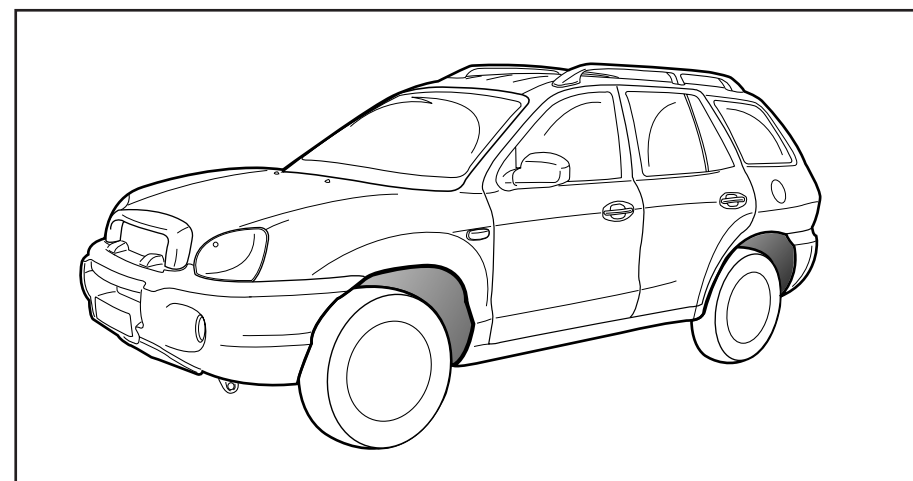










Bestel Nr.: HY-017-BB




* Teilliste





* Liste de pieces



* Part list

* Onderdelenlijst

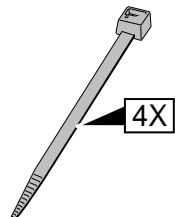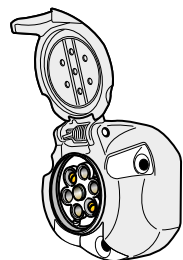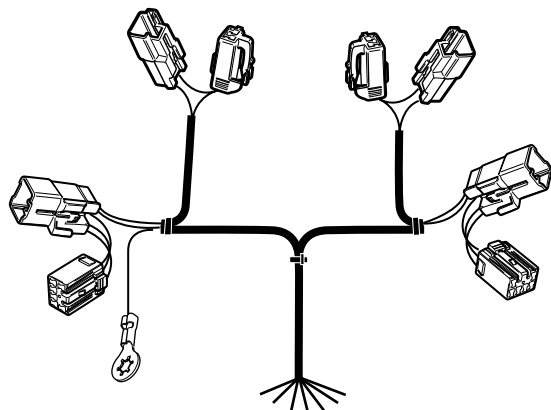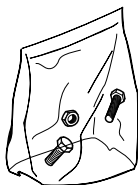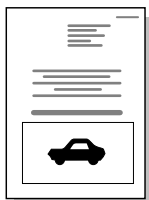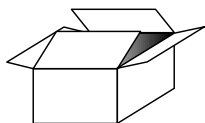

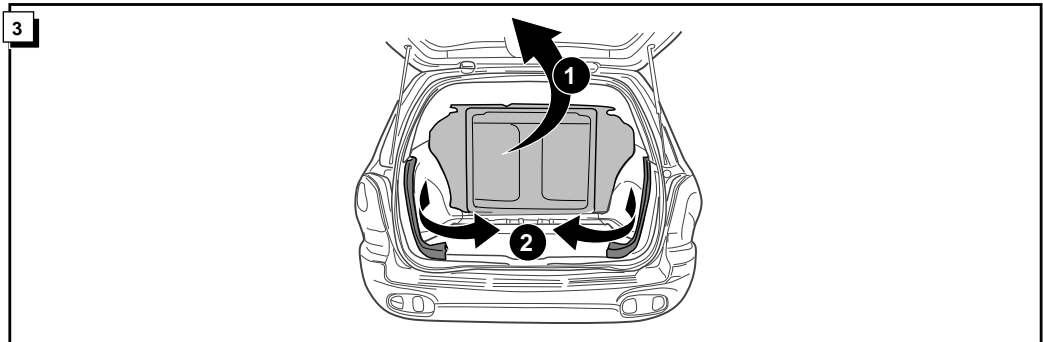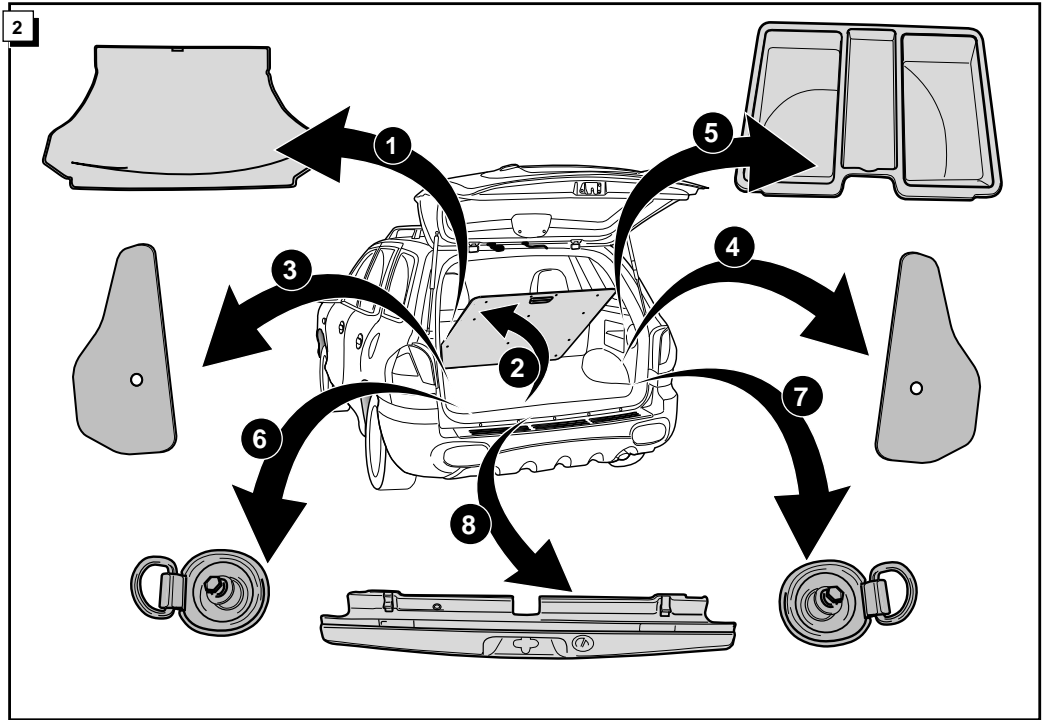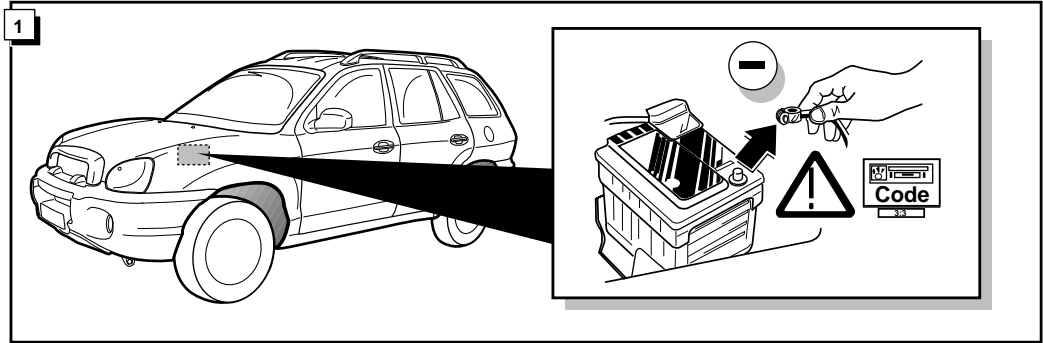


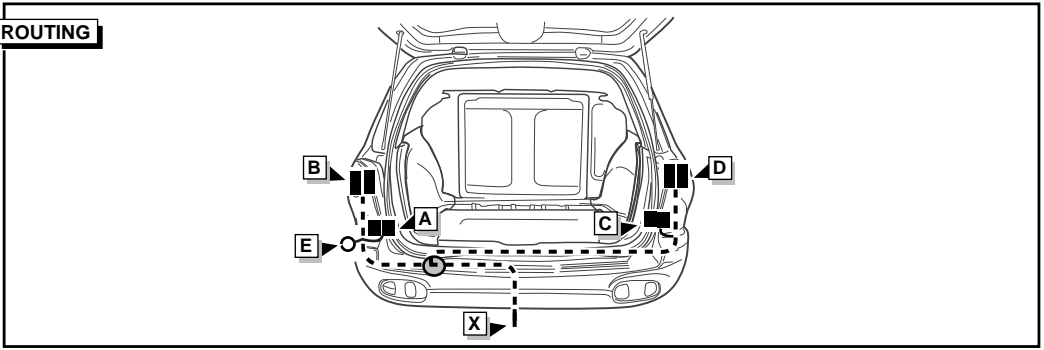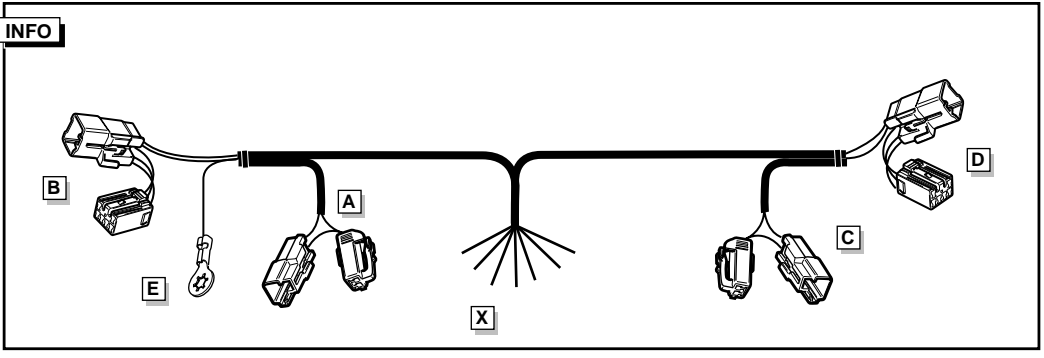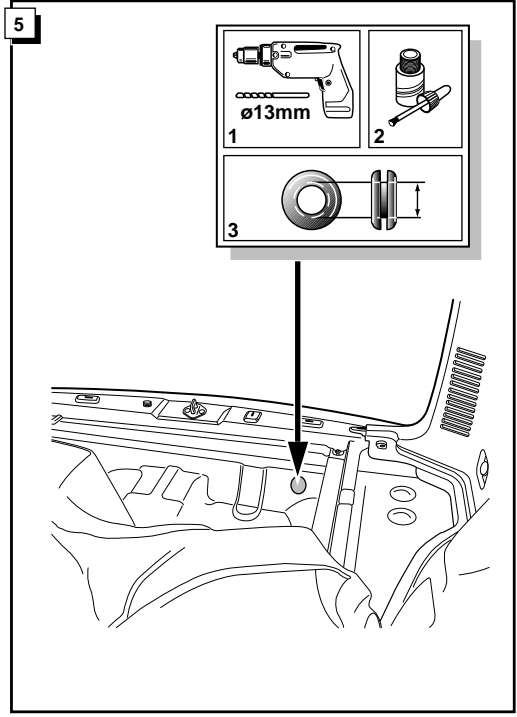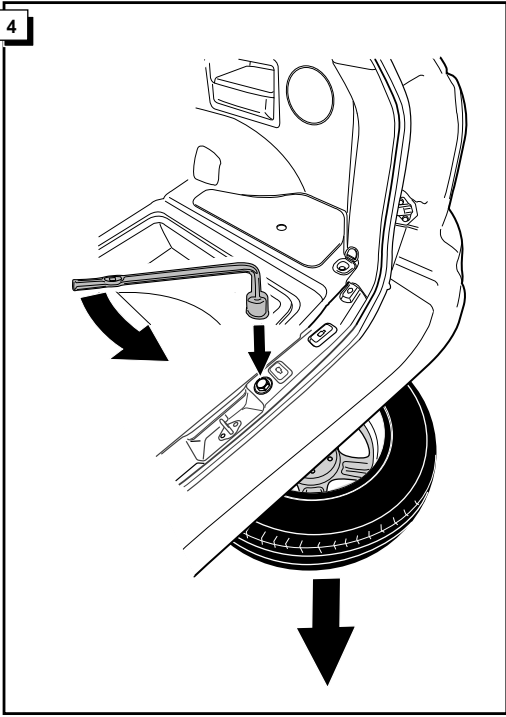



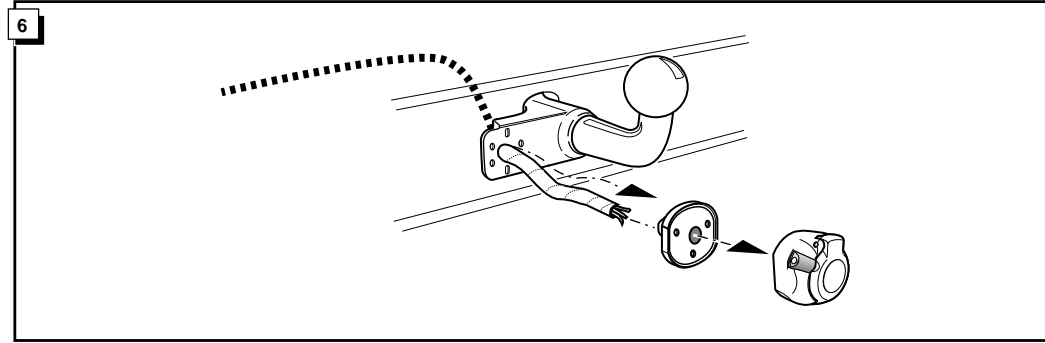
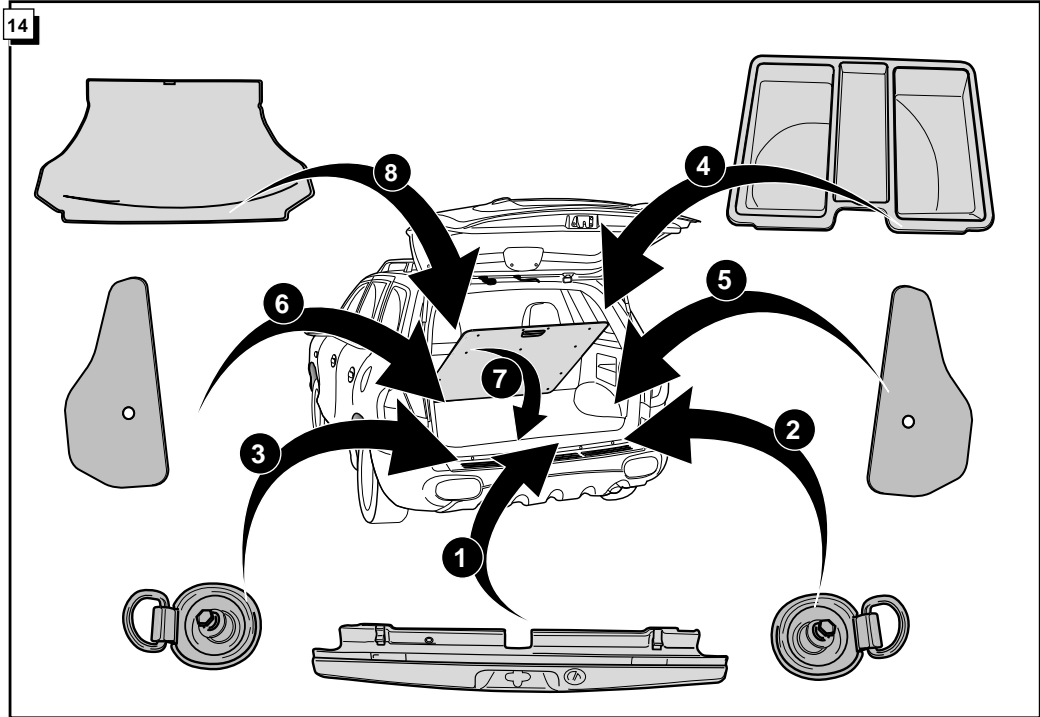


INFO Anschluß Steckdose / Connection de la prise / Socket connection / Contactdoos aansluiting



DIN/ISO 1724		D	F	GB	NL
←	1/L	gelb	jaune	yellow	geel
↔	2	blau	bleu	blue	blauw
⏏	1-8	weiß	blanc	white	wit
→	4/R	grün	vert	green	groen
☀	5/58-R	braun	marron	brown	bruin
STOP	6/54	rot	rouge	red	rood
☀	7/58-L	schwarz	noir	black	zwart
↔	8/58-b	grau	gris	grey	grijs

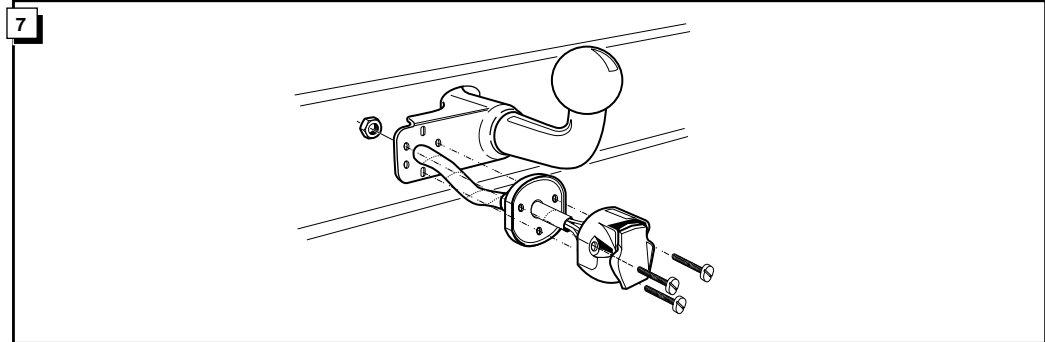



8

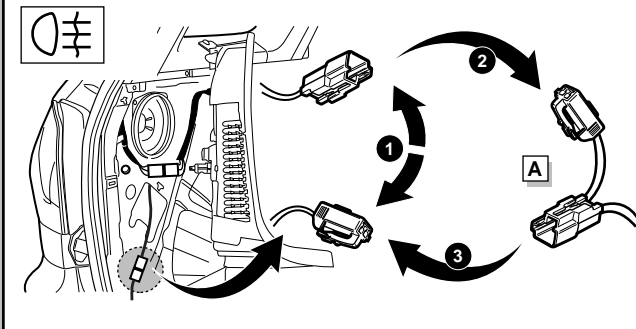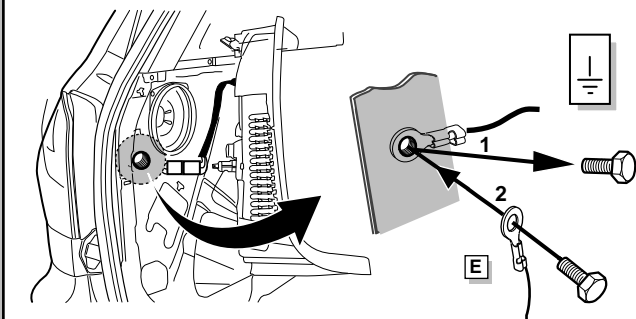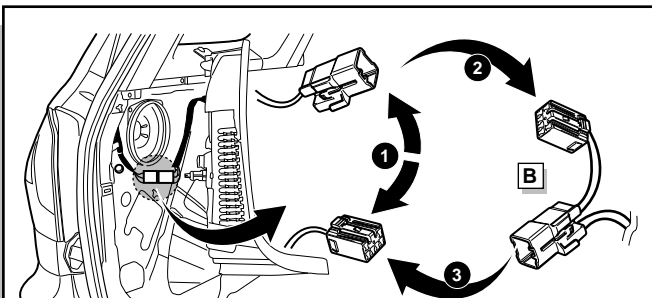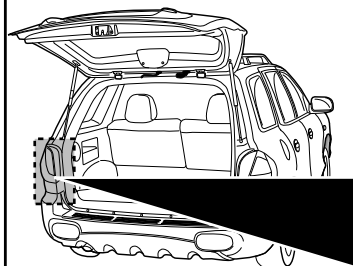


9

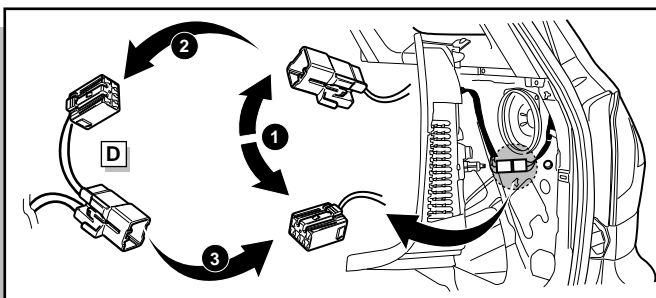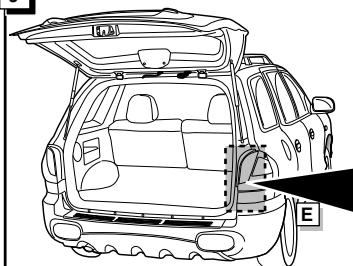

10

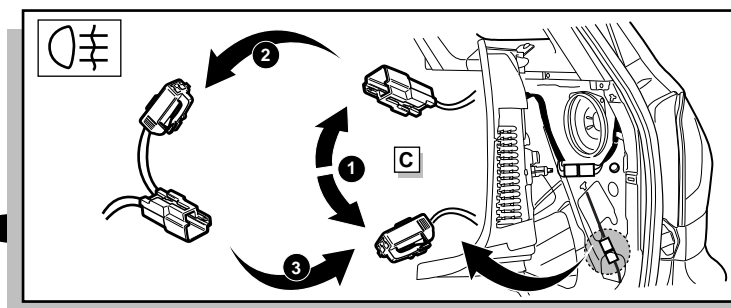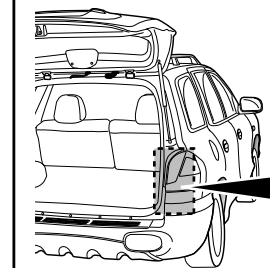

11

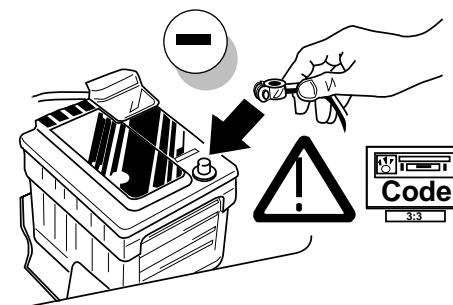

12

! FUNKTIONEN KONTROLLIEREN !
! CONTRÔLER LES FONCTIONS !
! CHECK FUNCTIONS !
! CONTROLEER FUNCTIES !

13

