



Thule Rapid System Kit 1184

> Instructions





CITROËN Berlingo, 3/4-dr Van, 97-02, 03-08

CITROËN Xsara Picasso, 5-dr MPV, 00-03, 04-12*

PEUGEOT Partner, 3/4-dr Van, 97-02, 03-08

PEUGEOT Ranch, 3/4-dr Van, 97-02, 03-08

* without sunroof

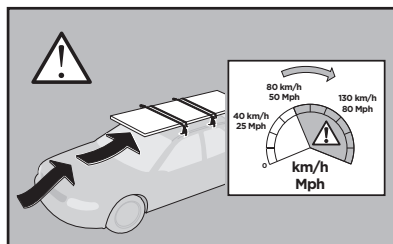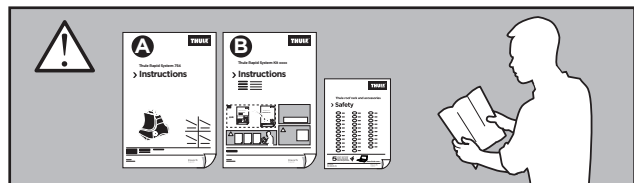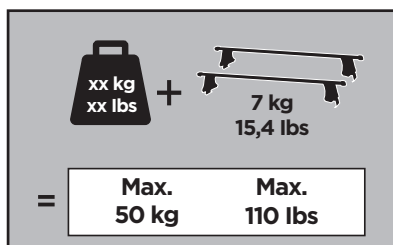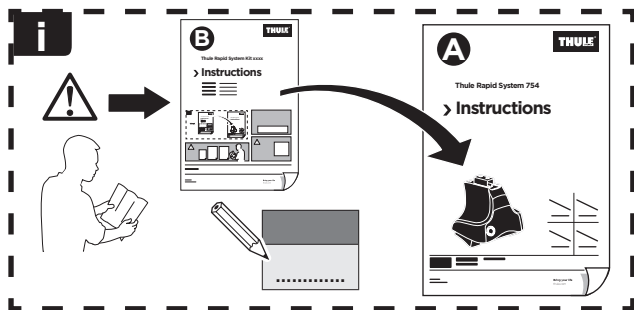


ISO 11154-E

141184
C.20150920
519-1184-02

Bring your life
thule.com



346 x 4



22 x 4






x1



x1

1

	X (scale)	X (mm)	X (inch)
CITROËN Berlingo , 3/4-dr Van, 97-02, 03-08	23,5	886	34 ⁷ / ₈
CITROËN Xsara Picasso , 5-dr MPV, 00-03, 04-12	21	861	33 ⁷ / ₈
PEUGEOT Partner , 3/4-dr Van, 97-02, 03-08	23,5	886	34 ⁷ / ₈
PEUGEOT Ranch , 3/4-dr Van, 97-02, 03-08	23,5	886	34 ⁷ / ₈

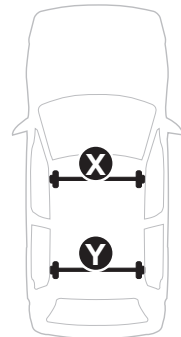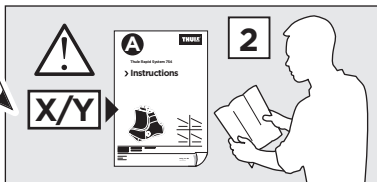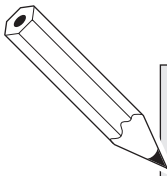

	Y (scale)	Y (mm)	Y (inch)
CITROËN Berlingo , 3/4-dr Van, 97-02, 03-08	24	891	35 ¹ / ₈
CITROËN Xsara Picasso , 5-dr MPV, 00-03, 04-12	20	851	33 ¹ / ₂
PEUGEOT Partner , 3/4-dr Van, 97-02, 03-08	24	891	35 ¹ / ₈
PEUGEOT Ranch , 3/4-dr Van, 97-02, 03-08	24	891	35 ¹ / ₈



2

CITROËN Berlingo, 3/4-dr Van, 97-02, 03-08


CITROËN Xsara Picasso, 5-dr MPV, 00-03, 04-12*

PEUGEOT Partner, 3/4-dr Van, 97-02, 03-08




PEUGEOT Ranch, 3/4-dr Van, 97-02, 03-08

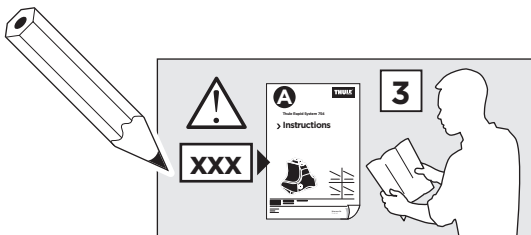
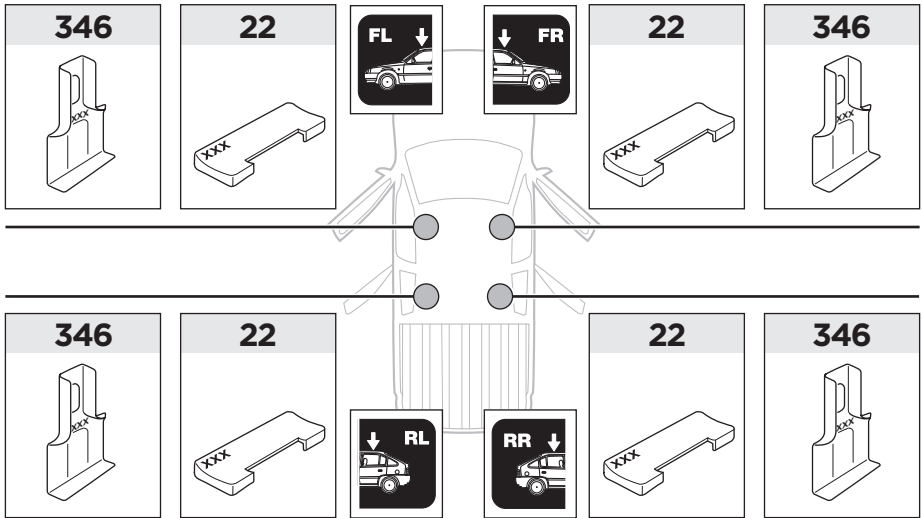




3

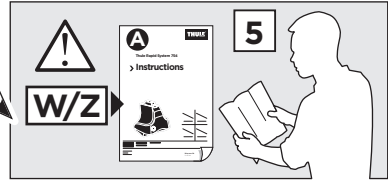

	W (mm)	Z (mm)	W (inch)	Z (inch)
CITROËN Berlingo , 3/4-dr Van, 97-02, 03-08	770	600	30 ³ / ₈	23 ⁵ / ₈
CITROËN Xsara Picasso , 5-dr MPV, 00-03, 04-12	320	700	12 ⁵ / ₈	27 ¹ / ₂
PEUGEOT Partner , 3/4-dr Van, 97-02, 03-08	770	600	30 ³ / ₈	23 ⁵ / ₈
PEUGEOT Ranch , 3/4-dr Van, 97-02, 03-08	770	600	30 ³ / ₈	23 ⁵ / ₈

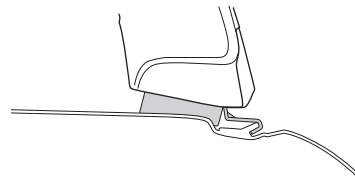
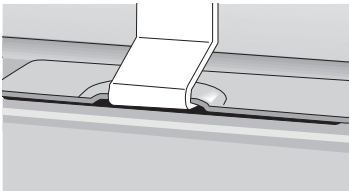
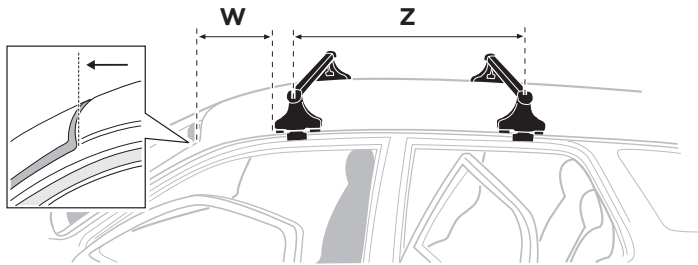


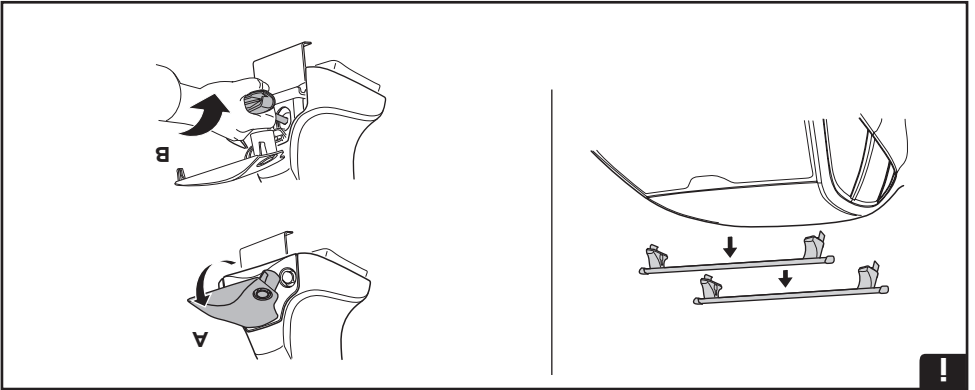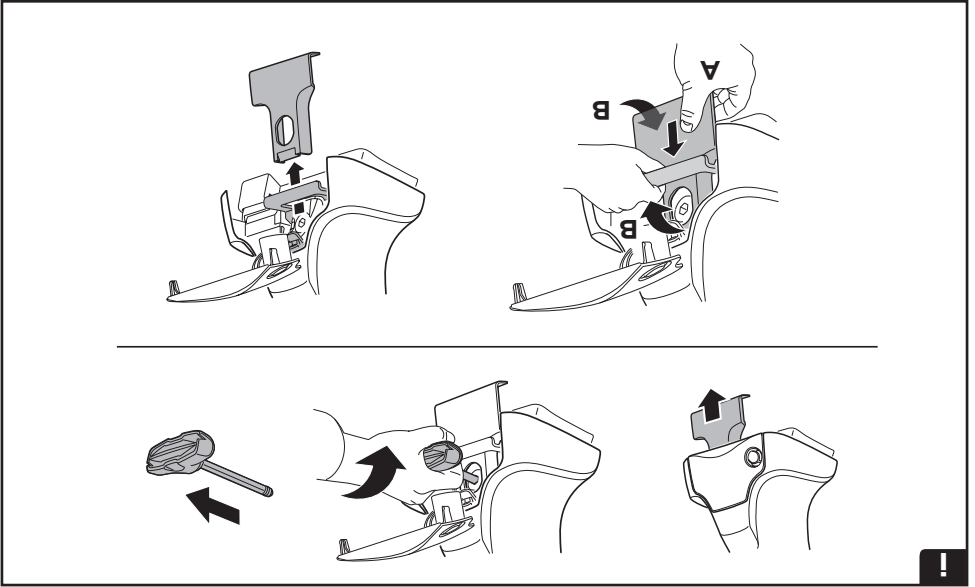

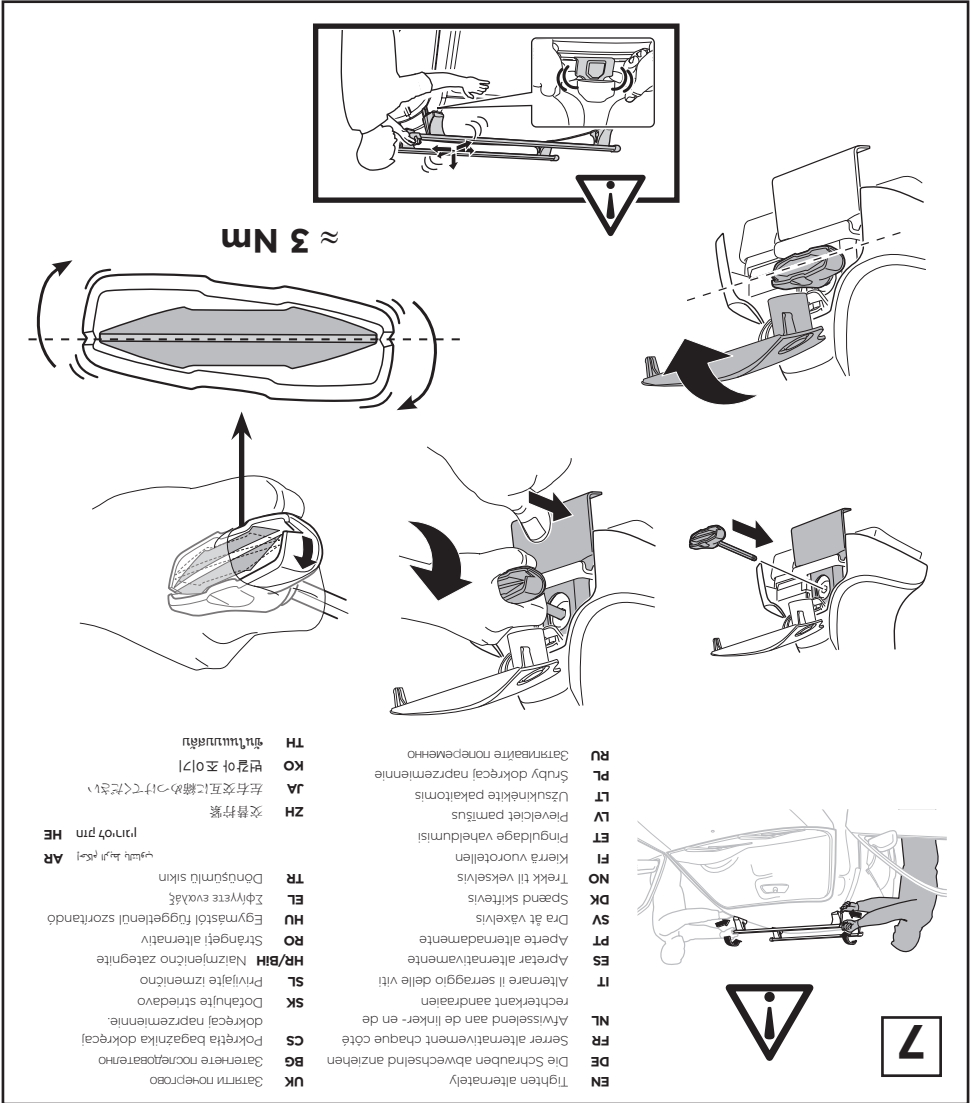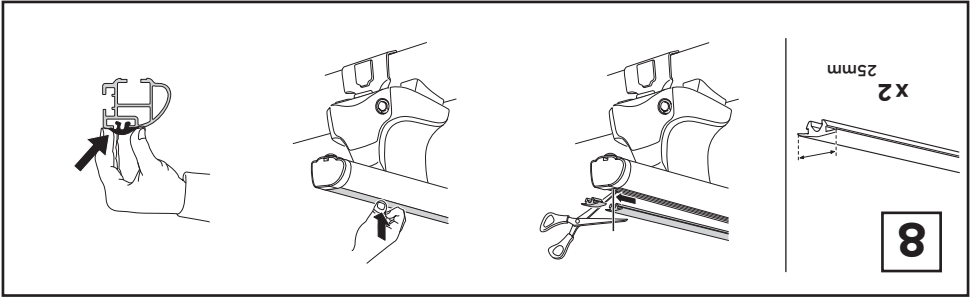



- UK Заміняти нащеплювач
- BG Замениете нащеплювача
- CS Pokrýtá bagazníka dokrécací
- FR Serrer alternativement chaque côté
- NL Afwisselend aan de linker- en de rechterkant aandraaien
- IT Alternare il serraggio delle viti
- ES Apertre alternativamente
- PT Aperte alternadamente
- SV Dra åt växelvis
- DK Spænd skiftevis
- NO Trekk til vekselvis
- FI Kiertä vuorotellen
- ET Pinguldage vaheldumisi!
- LV Pieveicēt pamīšus
- LT Užsukinkitė pakaitomis
- PL Srdub dokrécací naprzemiennie
- RU Заменяйте попеременно
- TH ផ្លាស់ប្តូរ
- KO 좌우 교대로
- JA 左右交互に締めつけください
- ZH 交替拧紧
- HE פרוטן גומי
- AR بديل المطبق
- TR Dönüşümü sıkın
- EL εναλλάξ εναλλάξ
- HU Egyarástól függetlenül szorítandó
- RO Strângeți alternativ
- HR/BIH Naizmjenično zategnite
- SK Dotiahnuť striedavo
- SL Privijajte izmenično

≈ 3 Nm









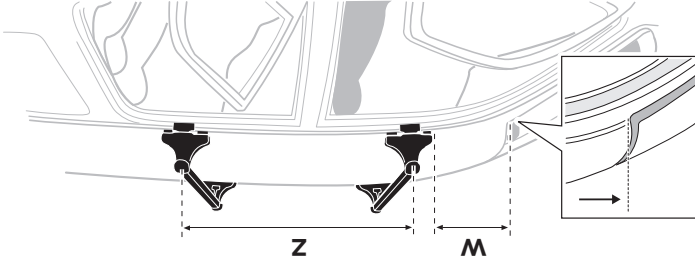
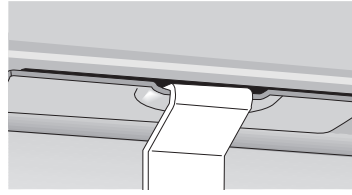
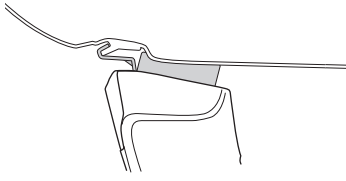


23 3/8	30 1/8	600	770	CITROËN Berlingo, 3/4-dr Van, 97-02, 03-08
23 3/8	30 1/8	600	770	PEUGEOT Partner, 3/4-dr Van, 97-02, 03-08
27 1/2	12 5/8	700	320	CITROËN Xsara Picasso, 5-dr MPV, 00-03, 04-12
23 3/8	30 1/8	600	770	CITROËN Berlingo, 3/4-dr Van, 97-02, 03-08


X mm Y mm X inch Y inch

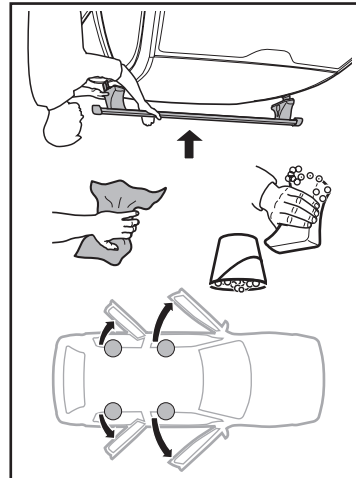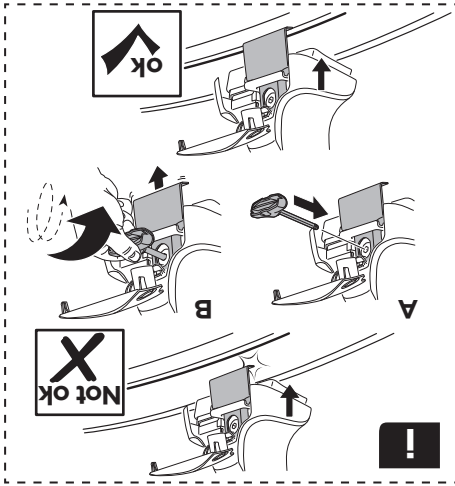


6

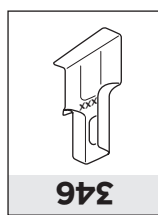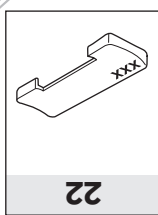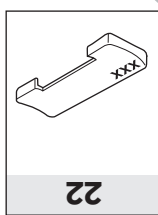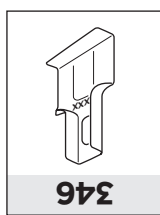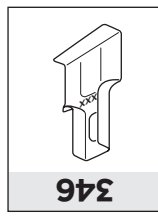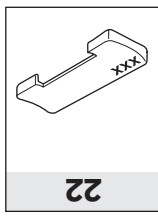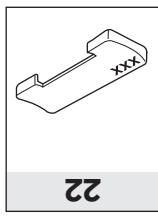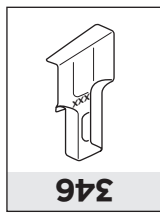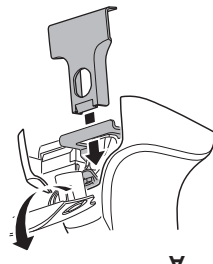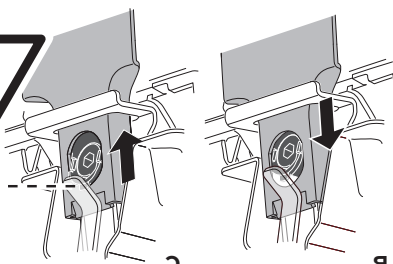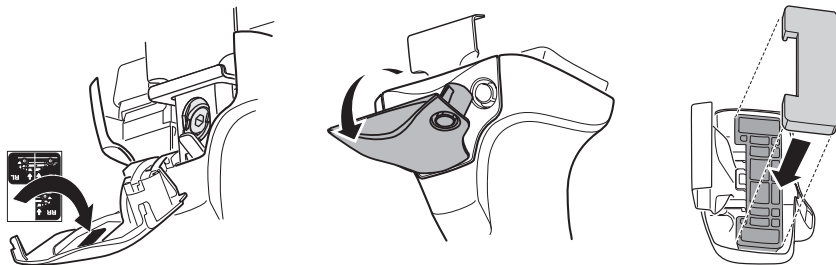

CITROËN Berlingo, 3/4-dr Van, 97-02, 03-08
 PEUGEOT Partner, 3/4-dr Van, 97-02, 03-08
 CITROËN Xsara Picasso, 5-dr MPV, 00-03, 04-12
 PEUGEOT Ranch, 3/4-dr Van, 97-02, 03-08

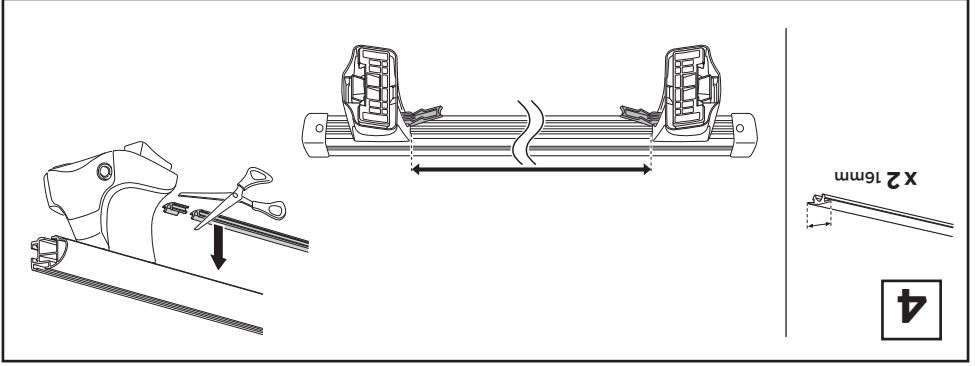


891	$35 \frac{1}{8}$	PEUGEOT Ranch, 3/4-dr Van, 97-02, 03-08	
891	$35 \frac{1}{8}$	PEUGEOT Partner, 3/4-dr Van, 97-02, 03-08	
851	$33 \frac{1}{2}$	CITROËN Xsara Picasso, 5-dr MPV, 00-03, 04-12	
891	$35 \frac{1}{8}$	CITROËN Berlingo, 3/4-dr Van, 97-02, 03-08	
			<div style="border: 1px solid black; width: 40px; height: 40px; display: flex; align-items: center; justify-content: center; margin: 0 auto;"> 3 </div>






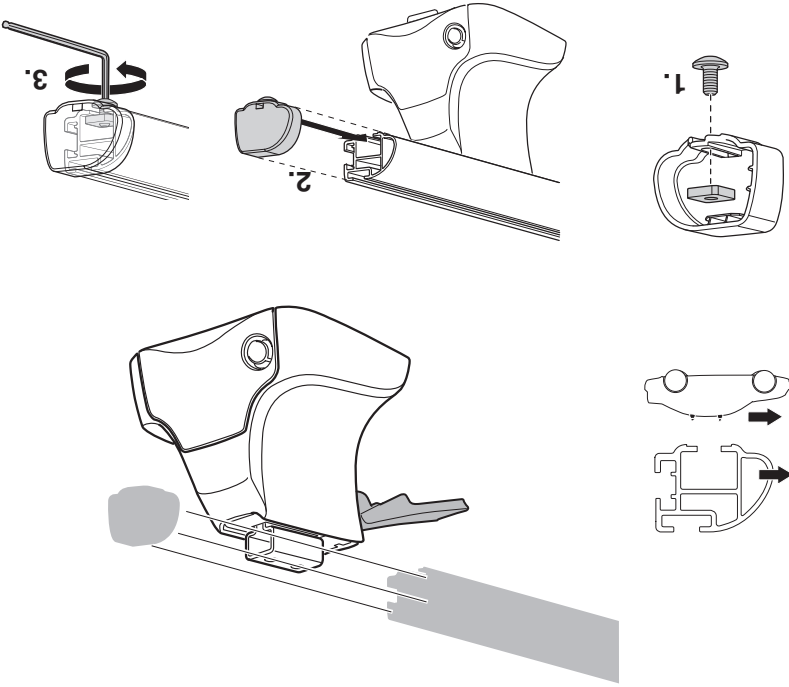


- X1 5mm Allen key
- X4 Screws
- X4 Spacers
- X2 Small handles
- X2 Large handles

2

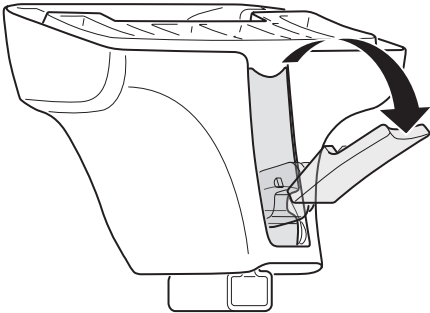

1

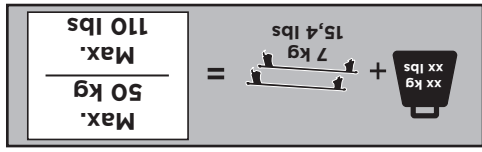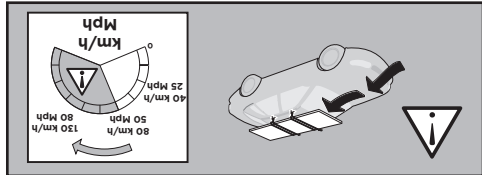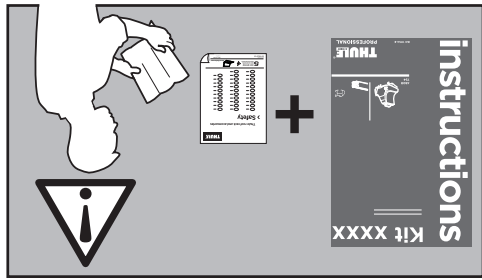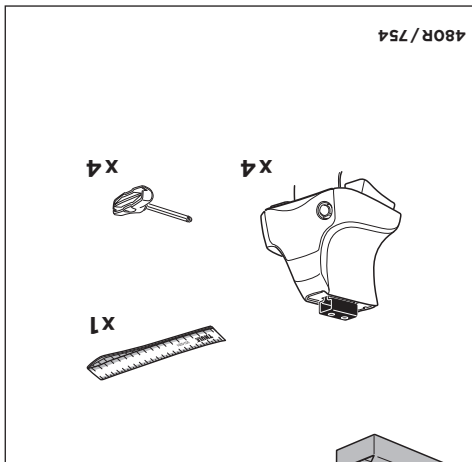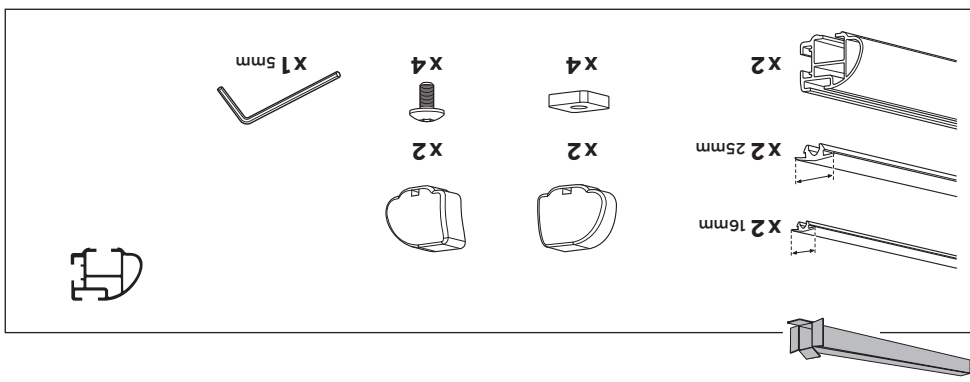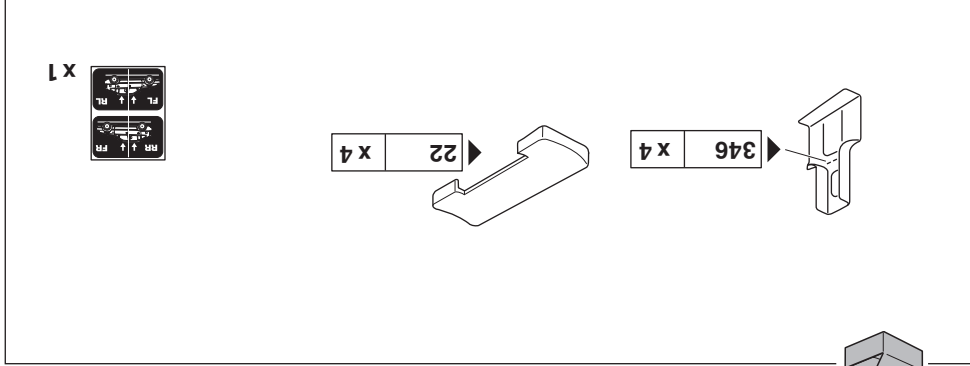


instructions


Kit 1184

CITROËN Berlingo, 3/4-dr Van, 97-02, 03-08
 CITROËN Xsara Picasso, 5-dr MPV, 00-03, 04-12*
 PEUGEOT Partner, 3/4-dr Van, 97-02, 03-08
 PEUGEOT Ranch, 3/4-dr Van, 97-02, 03-08

* without sunroof

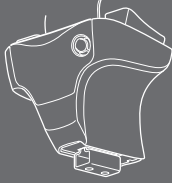

480R
754



ISO 11154-E

PROFESSIONAL

THULE
SWEDEN