

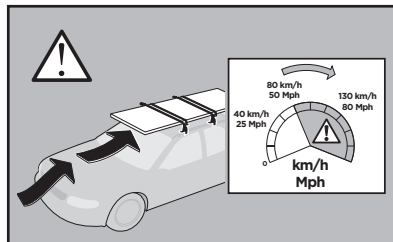
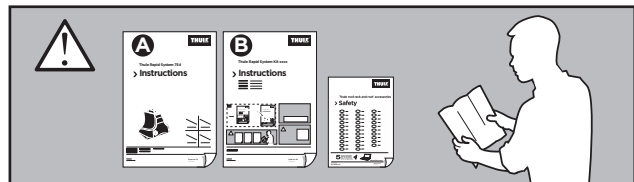


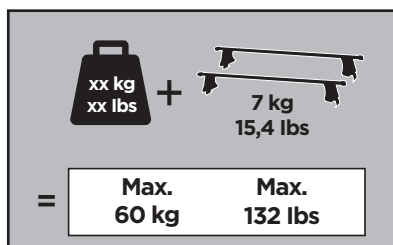

## Thule Rapid System Kit 1808

# > Instructions


RENAULT Kadjar, 5-dr SUV, 15-

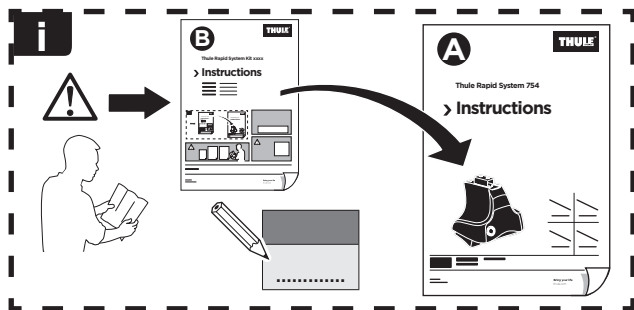

ISO 11154-E


141808  
C.20160115  
519-1808-01

Bring your life  
thule.com

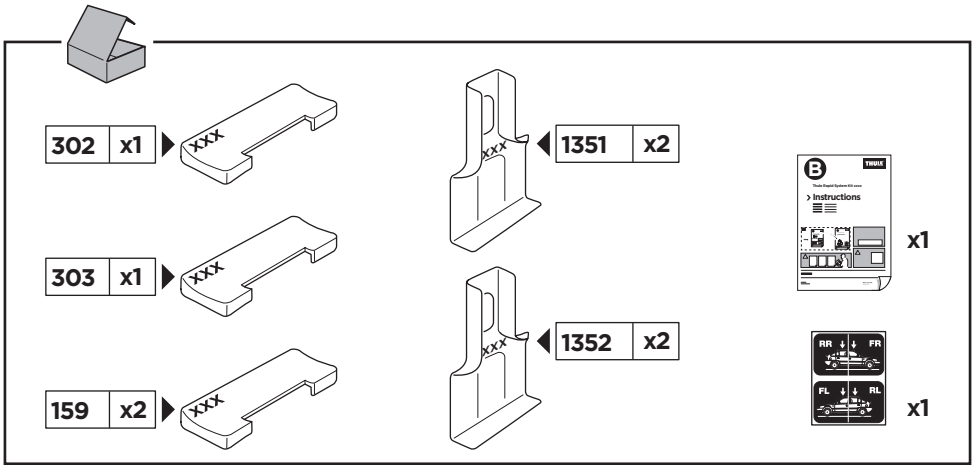



**1**

	X (scale)	X (mm)	X (inch)
<b>RENAULT Kadjar, 5-dr SUV, 15-</b>	<b>42.5</b>	<b>1076</b>	<b>42 <sup>3</sup>/<sub>8</sub></b>

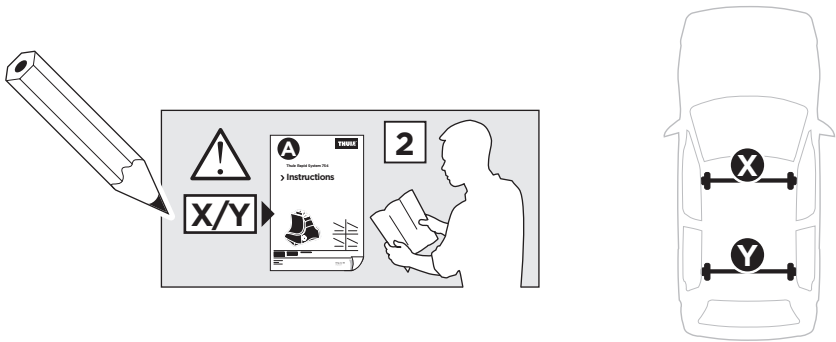

	Y (scale)	Y (mm)	Y (inch)
<b>RENAULT Kadjar, 5-dr SUV, 15-</b>	<b>35.5</b>	<b>1006</b>	<b>39 <sup>5</sup>/<sub>8</sub></b>

2

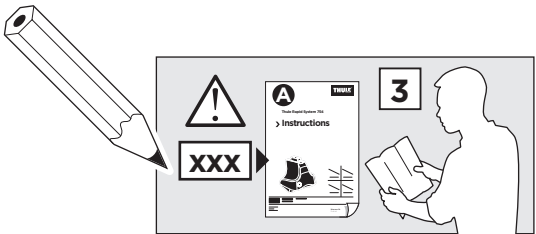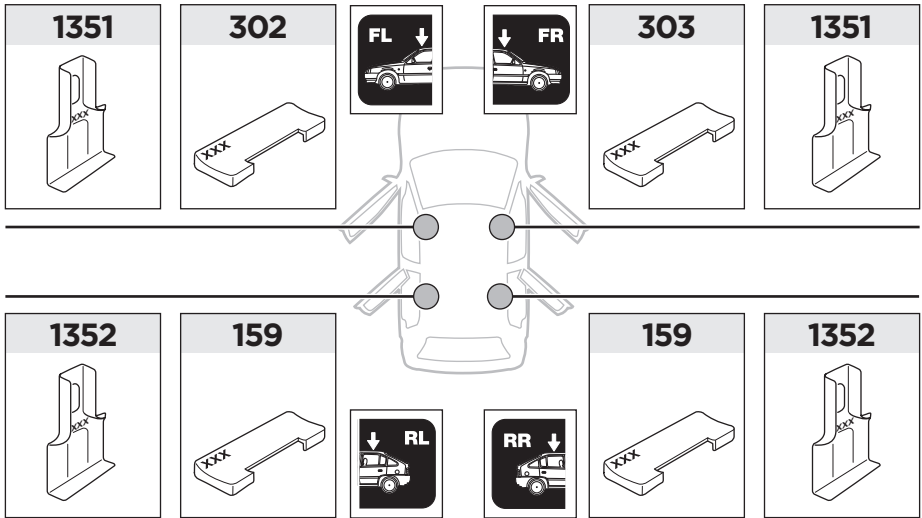

**3**

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>RENAULT Kadjar, 5-dr SUV, 15-</b>	<b>140</b>	<b>780</b>	<b>5 1/2</b>	<b>30 3/4</b>

