
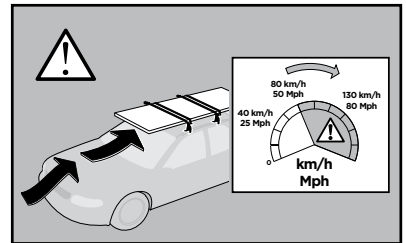
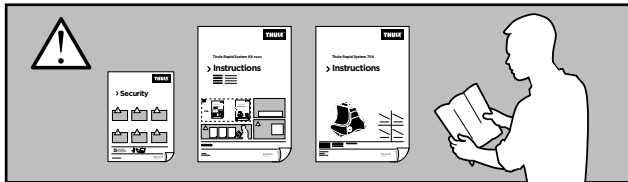
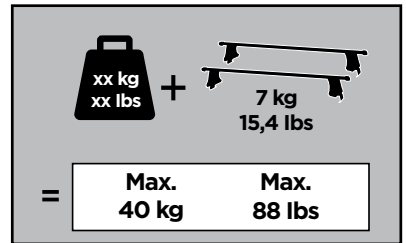


# Thule Rapid System Kit 1472

# > Instructions

**FORD S-Max, 5-dr MPV, 06-\***


\* Without fixpoint and with glassroof

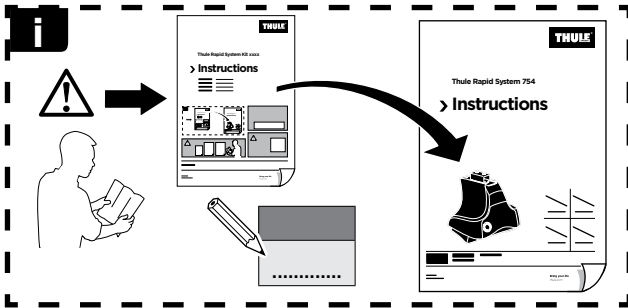


ISO 11154-E




65 x2



249 x1



250 x1




807 x2



956 x2





x1



x1

1


	X (scale)	X (mm)	X (inch)
<b>FORD S-Max, 5-dr MPV, 06-*</b>	<b>55</b>	<b>1201</b>	<b>47 1/4</b>

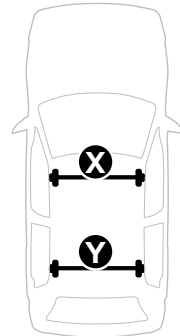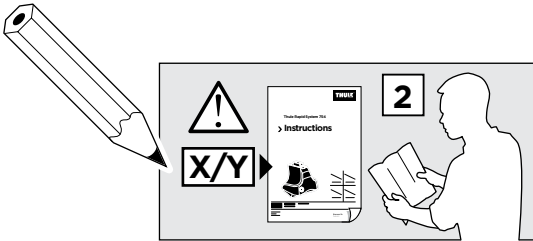


	Y (scale)	Y (mm)	Y (inch)
<b>FORD S-Max, 5-dr MPV, 06-*</b>	<b>55,5</b>	<b>1206</b>	<b>47 1/2</b>

**2**

**FORD S-Max, 5-dr MPV, 06-\***

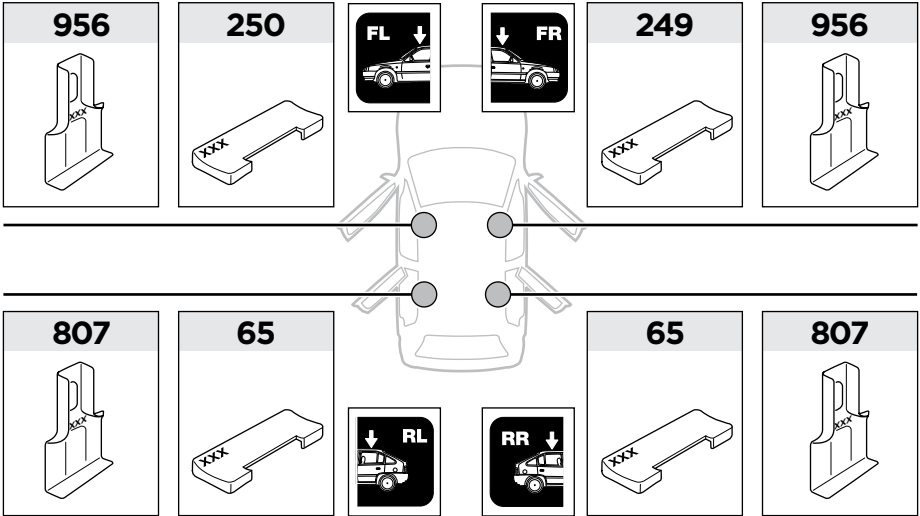

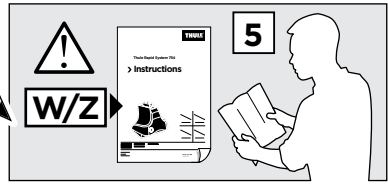**3**

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>FORD S-Max</b> , 5-dr MPV, 06-*	<b>420</b>	<b>735</b>	<b>16 1/2</b>	<b>28 7/8</b>

